WA186DSHASU

Washing Machine
user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service, please register your product at

www.samsung.com/register

SAMSUNG

WA186DSHASU-02703E_EN_130131.indd 1 2013-01-31 □□ 5:56:51

key features of your new washer

1. VRT® (Vibration Reduction Technology)

The Samsung washer performs smoothly at top spin speeds helping to minimize noise and vibration.

2. The large Capacity

Even bulky garments and blankets get super clean. The large capacity leaves enough room for a thorough, cleane wash.

3. Tub Clean

Clean your drum with one button! Tub Clean is specially designed to remove detergent residue and dirt build up in the tub, without the need for special chemical detergents.

4. Stylish design

The stylish design of this washer blends well with your decoration.

5. Center jog dial

The Jog dial enables you to select cycles in both directions with ease.

6. DD Motor

The power to handle just about anything! Our direct-drive inverter motor delivers power right to the washer tub from a variable speed, reversible motor. A beltless direct-drive motor generates a high spin speed of 1,100rpm for effective, quiet operation. The washer also has fewer moving parts than other Samsung washers fewer repairs.

7. Tempered Glass Lid

The tempered glass lid is durable and makes it easy to see the inside of the washer.

8. Lid Lock Switch

The washer lid is locked during operation. The lid can be unlocked by pressing the Start/ Pause button to stop the washer.

WA186DSHASU-02703E_EN_130131.indd Sec9:2 2013-01-31 □□ 5:57:33

safety information

Congratulations on your new Samsung Washer. This manual contains important information on the installation, use, and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WA186DSHASU-02703E_EN_130131.indd Sec1:3 2013-01-31 5:57:33

safety information

IMPORTANT SAFETY PRECAUTIONS

WARNING To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

If the power plug or power cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For washing machines with ventilation openings on the base, ensure that the opening is not obstructed by a carpet or any other obstacles.

Please use the new hoses. Do not use the old hoses.

WA186DSHASU-02703E_EN_130131.indd Sec1:4 2013-01-31 □□ 5:57:33

WARNING CRITICAL INSTALLATION WARNINGS

Plug the power cord into an AC 220 V / 60 Hz wall socket rated at 15 amps or higher. Use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances, using a power strip, or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current match the product's specifications. Failing to do so may result in electric shock or fire.

Have this appliance installed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failing to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- Improper grounding may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly. Make sure the socket you use is grounded in accordance with local and national codes.

Do not install this appliance near a heater or inflammable material.
Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (including rain drops).
Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failing to do so may result in electric shock or fire.

If the power plug or power cord are damaged, contact your nearest service center.

WA186DSHASU-02703E_EN_130131.indd Sec1:5 2013-01-31 □□ 5:57:33

safety information

CAUTION INSTALLATION CAUTIONS

Position the appliance so that the power plug is easily accessible.
- Failing to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.
- Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.
- Failing to do so may result in electric shock or fire.

WARNING CRITICAL USAGE WARNINGS

If the appliance is flooded, cut the power immediately and contact your nearest service center.
If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service center.
- Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate the area immediately. Do not turn any appliance or light on or off.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.
- This may result in electric shock, fire, or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/drying/spinning).
- Water flowing out of the washer may cause burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may cause damage to the product or injury.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

Do not insert your hand under the washer.
- This may result in injury.

Do not touch the power plug with wet hands.
- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while the washer is in operation.
- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over its head, it may suffocate.

Do not let children or infirm persons use this washer unsupervised.
- Failing to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.
- This may result in injury.

WA186DSHASU-02703E_EN_130131.indd Sec1:6 2013-01-31 □□ 5:57:33

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- If you need to repair or reinstall the appliance, contact your nearest service center.
- Failing to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water enters the appliance in any area other than the tub, unplug the power plug and contact your nearest service center.
- Failing to do so may result in electric shock or fire.

If the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.
- Failing to do so may result in electric shock or fire.

CAUTION USAGE CAUTIONS

If the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.
- Failing to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.
- If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.
Open the faucet slowly after a long period of non-use.
- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.
- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.
- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.
- Ensure that the water supply hose connectors are properly tightened.
- Failing to do so may result in property damage or injury.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the water supply hose connectors are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

WA186DSHASU-02703E_EN_130131.indd Sec1:7 2013-01-31 □□ 5:57:33

safety information

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.
- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire,or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats or, clothing*.
- Do not wash thick, hard mats even if the washer mark is on the care label. This may result in injury or damage to the washer, walls, floor,or clothing due to abnormal vibrations.

* Items not to wash: Woolen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not insert your hand into the detergent dispenser after opening it.
- This may result in injury as your hand may be caught.

Do not place any non-laundry objects, such as shoes, food waste, or animals into the washer.
- This can cause abnormal vibrations that can damage the washer, and, in the case of pets, cause severe injury or death.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams, or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects (safety pins, hair pins, etc.) or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust appears on the surface of the tub, apply a neutral cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to heat from the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WA186DSHASU-02703E_EN_130131.indd Sec1:8 2013-01-31 □□ 5:57:33

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may cause problems with the product, discoloration, rust, or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Failing to do so may result in injury due to abnormal vibrations.
- Place smaller items, such as lace socks and lingerie in the washing net.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

Do not wash throw rugs or doormats.

- If you wash throw rugs or doormats, the sand will accumulate inside the washer. It may result in error such as no draining.

WARNING CRITICAL CLEANING INSTRUCTIONS

Do not clean the appliance by spraying water directly onto it.
Do not use the strong acid cleaning agent.
Do not use benzene, thinner, or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock, or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failing to do so may result in electric shock or fire.

WA186DSHASU-02703E_EN_130131.indd Sec1:9 2013-01-31 □□ 5:57:33

contents

INSTALLING YOUR WASHER 11

11 Unpacking your washer
11 Overview of your washer
12 Electrical
12 Grounding
12 Water
13 Drain facility
13 Flooring
13 Location considerations
13 Alcove or closet installation
14 Required Dimensions for Installation
15 Important note to installer

OPERATING INSTRUCTIONS 17

17 Loading your washer
17 Getting started

WASHING A LOAD OF LAUNDRY 18

18 Overview of the control panel
20 Child Lock
21 Sound Off
21 Delay Start
22 Smart Check
23 Washing clothes using the cycle selector
24 Which detergent to use
25 Features
25 Automatic dispenser
25 Loading the Fabric softener compartment

MAINTAINING YOUR WASHER 26

26 Cleaning the exterior
26 Cleaning the interior
26 Storing your washer
26 Preserving the top cover and the front frame
27 Cleaning the dispensers
27 Diamond (Magic) filter

TROUBLESHOOTING 28

28 Check these solutions if your washer…
30 Information codes

APPENDIX 32

32 Fabric care chart
33 Cycle chart
34 Helping the environment
34 Declaration of conformity
34 Specification

WA186DSHASU-02703E_EN_130131.indd Sec6:10 2013-01-31 □□ 5:57:34

installing your washer

UNPACKING YOUR WASHER

Unpack your Washer and inspect it for shipping damage. Make sure you have received all the items shown below. If your Washer was damaged during shipping, or you do not have all of the items, contact Samsung Customer Service or your Samsung dealer.

To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

WARNING Packing materials can be dangerous to children; Keep all packing material (plastic bags, polystyrene, etc.) well out of childrens' reach.

OVERVIEW OF YOUR WASHER

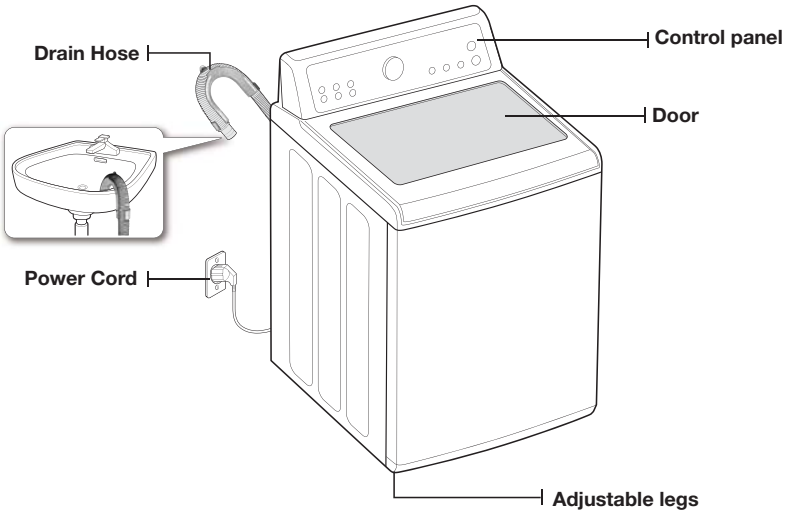

Parts supplied

Hose guide

Spaner

User manual book


Water supply hoses

Plastic zip hose tie

Tools needed

Pliers

Flat screwdriver

WA186DSHASU-02703E_EN_130131.indd Sec3:11 2013-01-31 □□ 5:57:34

installing your washer

BASIC LOCATION REQUIREMENTS

Electrical

- 220 V / 60 Hz fuse or circuit breaker
- Individual branch circuit serving only your Washer is recommended.
- Your Washer is equipped with a power cord.

CAUTION NEVER USE AN EXTENSION CORD.

Grounding

ELECTRICAL GROUNDING IS REQUIRED FOR THIS APPLIANCE.

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

This appliance is equipped with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING An improperly connected equipment-grounding conductor can increase the risk of electrical shock. Check with a qualified electrician or serviceman if you are not sure whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

IMPORTANT SAFETY PRECAUTIONS

- To prevent unnecessary risk of fire, electrical shock or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

CAUTION NEVER CONNECT THE GROUND WIRE TO PLASTIC PLUMBING LINES, GAS LINES, OR HOT WATER PIPES.

Water

To correctly fill your Washer in the proper amount of time, water pressure of 20 to 116psi (137 to 800kPa) is required.

Water pressure less than 20 psi may cause water valve failure, or may not allow the water valve to shut off completely, or may extend the fill time beyond what your Washer controls allow, causing your Washer to turn off. A time limit is built into the controls to prevent flooding in your home if a hose becomes loose.

The water faucets must be within 4 feet/122cm of the back of your Washer to match the inlet hoses provided with your Washer.

Accessory inlet hoses are available in various lengths up to 10 feet/305cm for faucets that are further away from the back of your Washer.

To avoid the possibility of water damage:

- Have water faucets easily accessible
- Turn off faucets when the washer is not in use.
- Periodically check that there is no leakage from the water inlet hose fittings.

WARNING CHECK ALL CONNECTIONS AT THE WATER VALVE AND FAUCET FOR LEAKS.

WA186DSHASU-02703E_EN_130131.indd Sec3:12 2013-01-31 □□ 5:57:34

Drain facility

The recommended height of the standpipe is 39 in/ 99 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached to the washer at the factory.

Flooring

For best performance, you must install your washer on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced load situations. Carpeting and soft tile surfaces are contributing factors to vibration which can cause your washer to move slightly during the spin cycle.

Never install your washer on a platform or weakly supported structure.

Location considerations

Do not install your washer in areas where water may freeze, since your washer will always retain some water in its water valve, pump, and hose areas. Frozen water can damage the belts, the pump, hoses, and other components.

Alcove or closet installation

MINIMUM CLEARANCES FOR CLOSET AND ALCOVE INSTALLATIONS:

Sides – 1 in / 25 mm

Closet Front – 2 in / 51 mm

Rear – 6 in / 152 mm

TOP - 21 in / 533 mm

If the washer and dryer are installed together, the closet front must have at least a 72 in² (465 cm²) unobstructed air opening. Your washer alone does not require a specific air opening.

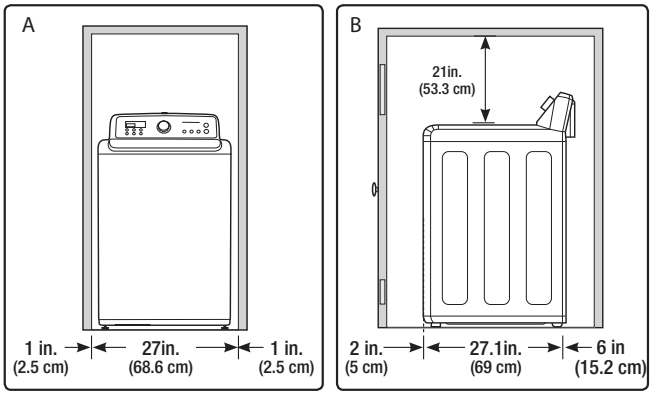

A. Recessed area

B. Side view - closet or confined area

WA186DSHASU-02703E_EN_130131.indd Sec3:13 2013-01-31 □□ 5:57:34

installing your washer

Required Dimensions for Installation

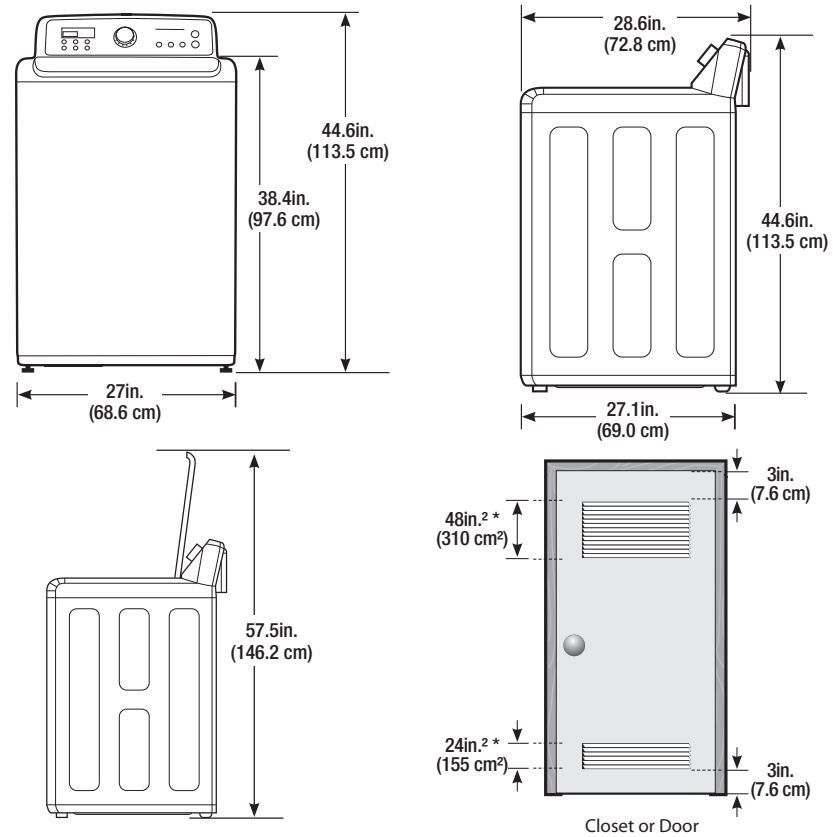

* Required spacing ** External exhaust elbow requires additional space.

WA186DSHASU-02703E_EN_130131.indd Sec3:14 2013-01-31 □□ 5:57:34

IMPORTANT NOTE TO INSTALLER

Please read the following instructions carefully before installing your Washer.

These instructions should be retained for future reference.

We recommend you hire a professional to install this washer.

STEP 1
Selecting a Location

Before you install your washer, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation.
- Has no dust, oil and detergent etc.
- Is away from direct sunlight
- Has adequate ventilation
- Will not freeze (temperatures are never below 32 °F or 0 °C)
- Is away from heat sources such as oil or gas
- Provides enough slack for the power cord.
- Doesn't have any carpeting that will obstruct ventilation openings.

STEP 2
Installing your Washer

1. If you use a stand pipe, make sure the connection between the drain hose and the standpipe is NOT airtight.
The standpipe must be at least 39 in or 99 cm high.

You must always exercise caution to avoid collapsing or damaging the drain hose. For best results, the drain hose should not be restricted in any way – by elbows, couplings, or excessive length. For situations where the drain hose cannot be conveniently elevated to at least 39 in or 99 cm, the drain hose must be supported.

Do not insert the drain hose too far into the stand pipe: 6 - 8 inches, and no more.

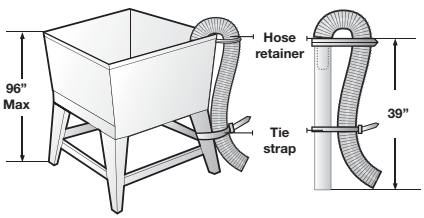

WA186DSHASU-02703E_EN_130131.indd Sec3:15 2013-01-31 □□ 5:57:36

installing your washer

2. Check the inlet hoses to ensure a washer is inside the coupling of each fill hose.
Thread the inlet hoses onto the HOT and COLD faucet connections.
On the other end of the hose, check for one rubber washer per hose and attach each fill hose to the water valve. Make sure the hose with Hot printed on it is attached to the HOT faucet. Tighten by hand until snug, then add two-thirds of a turn with pliers.

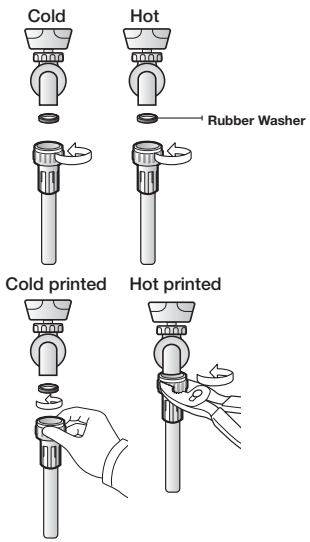

For correct water use, connect both HOT and COLD water valves. If either or both are not connected, an "4E" (no fill) error can occur.

3. Turn on the "HOT" and "COLD" water supplies and check all the water valve and the faucet connections for leaks.

4. Plug the power cord into a 3-Prong, well grounded 220 V / 60 Hz approved electrical outlet protected by a comparable circuit breaker.
Your washer is grounded through the third prong of the power cord when plugged into a three-prong grounded receptacle.

5. Slide your washer into position.

6. Level your washer by turning the leveling legs in or out as necessary by hand.

Your Washer must be level back to front and side to side. Use a carpenter's level on all four corners of your Washer to level it. It's a good idea after the first dozen washes to recheck your washer to ensure it is still level.

Test run
Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

WA186DSHASU-02703E_EN_130131.indd Sec3:16 2013-01-31 □□ 5:57:36

LOADING YOUR WASHER

- You can fill the tub with dry, unfolded clothes, but DO NOT OVERLOAD the tub, No more than 3/4 full.
- Overloading may reduce washing efficiency, cause excess wear, and possibly cause creasing or wrinkling of the load.
- Wash delicate items such as bras, hosiery, and other lingerie in the Delicates cycle with similar lightweight items.
- When washing big bulky items or a few smaller items that don't fill the tub completely – a rug, a pillow, stuffed toys, or one or two sweaters, for example – add a few towels to improve spin performance.

During the spin cycle, the washer may add additional water to redistribute the clothes and correct an unbalance inside the drum.

- When washing heavily soiled loads, do not overload your Washer to ensure good cleaning results.
- To add a forgotten item:
  1. Press the **Start/Pause** button to pause the washer.
  2. Wait for the door to unlock automatically, and then open the door.
  3. Add the item, close the door, and then press the **Start/Pause** Button. The cycle will resume.

GETTING STARTED

1. Load your Washer.
2. Add detergent and additives to the dispenser (see pages 24~25).
3. Select the appropriate cycle and options for the load (see pages 18~19).
4. Close the door.
5. Press the **Start/Pause** Button.
6. The Wash Indicator light illuminates.
7. The estimated cycle time will appear in the display.
   The time may fluctuate to indicate the time remaining in the cycle better.

The actual time required for a cycle may differ from the estimated time in the display depending on the water pressure, water temperature, detergent, and laundry.

8. Before your washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain.

- When the cycle is complete, the Door Lock light will go out and "End" will appear in the display.
- Pressing the Power button cancels the cycle and stops your washer.
- The Wash, Rinse ,and Spin indicator lights will illuminate during those portions of the cycle.

WA186DSHASU-02703E_EN_130131.indd Sec2:17 2013-01-31 □□ 5:57:37

washing a load of laundry

OVERVIEW OF THE CONTROL PANEL

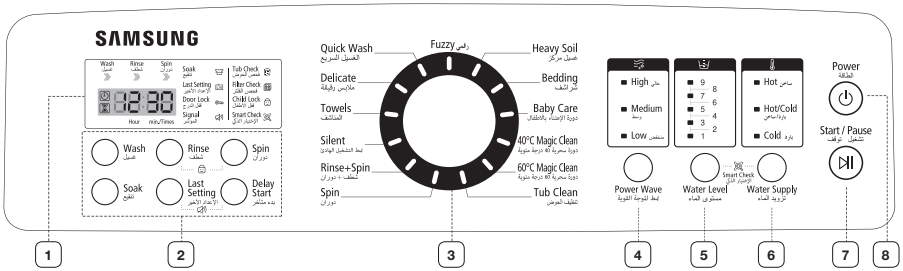

1 Display	Provides instructions and diagnostics while keeping you updated on the cycle status and time remaining.
2 Select Cycle Option	Press these buttons to select different cycle options. **Wash** - Press this button to only perform a wash cycle or to adjust the wash time. **Rinse** - Press this button to perform a rinse only or to adjust the rinse count. **Spin** - Press this button to perform a spin cycle only or to adjust the spin time. You can set the spin time from between 1 to 9 minutes. When only a spin is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time and the times for water draining and stopping. **Soak** - You can set the soak time from between 10 to 60 minutes. **Last Setting** - Selects this course to load the settings for the last course. Perform a wash course using the last used settings without having to enter them manually again. Your choices are automatically saved when you press the Start/Pause button. To use a memorized course, press the Last Setting button and then press the Start/Pause button. **Delay Start** - Delay the start of any cycle for up to 19 hours in one-hour increments. The hour displayed indicates the time when the wash will finish.
3 Cycle Selector	Select the appropriate cycle for the type of load. The cycle you select determines the tumble pattern and spin speed for the cycle. To minimize wrinkling of laundry, select the Perm Press cycle. **Fuzzy** - For most fabrics including cottons, linens, and normally soiled garments. **Heavy Soil** - Use this course, which adds the Soak cycle before the Wash cycle, to wash clothing stained with heavy dirt. **Bedding** - For bulky items such as blankets and sheets. When you are washing comforters, use liquid detergent. **Baby Care** - This course washes frequently washed items such as baby clothes and underwear to prevent damage to the fabric and adds extra rinse cycles to ensure cleanness. **40 °C / 60 °C Magic Clean** - This course effectively removes dirt using a customized water temperature.

WA186DSHASU-02703E_EN_130131.indd Sec5:18 2013-01-31 □□ 5:57:37

	Tub Clean - Use this program to clean the tub. It will keep the tub clean and sanitary. **Quick Wash** - For lightly soiled garments needed quickly. **Delicate** - This course is for washing delicate clothes that are easily deformed or damaged and woollen sweaters and cardigans with a water wash sign. **Towels** - For bath towels, washcloths, and mats. **Silent** - This course minimizes noise for night washes by decreasing the spinning power of the product. **Rinse+Spin** - Use for loads that need rinsing only or to add rinse-added fabric softener to a load. **Spin** - When only a Spin cycle is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time, the time for the water to drain and the washer to stop.
4 **Power Wave button**	You can select the water stream type. Medium → High → Low → Medium You can change the setting depending on the course. You cannot change the setting during a Spin cycle.
5 **Water Level button**	The water level is automatically adjusted. However, you can select the water level manually by pressing this button.
6 **Water Supply button**	Press this button repeatedly to cycle through the water options: Cold → Hot/Cold → Hot → Cold To change the water options, turn off the Silver Water function.
7 **Start/Pause selection button**	Press to pause and restart cycles.
8 **Power button**	Press once to turn your washer on. Press again to turn your washer off. If the washer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WA186DSHASU-02703E_EN_130131.indd Sec5:19 2013-01-31 □□ 5:57:37

Child Lock

Child Lock prevents children from playing with your washer.

Activating the Child Lock function

Press and hold the **Rinse** and **Spin** buttons simultaneously for approximately 3 seconds.

- When you activate the Child Lock function, the “Child Lock [🔒]” lamp blinks.

Using the Child Lock function

If the door is opened when the Child Lock function is on, “dE” is displayed and an alarm sounds.

- If the door is closed while “dE” is displayed, the alarm sound stops and the information code turns from “dE” to “Child Lock [🔒]”.
- 30 seconds after the contol panel displays “dE”, the washer performs a compulsory drain.
- Even if the power is off, if Child Lock is on and the door is opened for 30 seconds, the washer displays the “Child Lock [🔒]” code and performs a a compulsory drain.
- After the compulsory drain, the “CL” code display blinks at 1 second intervals and the product enters the “Child Lock [🔒]” mode. (When the product is in the “Child Lock [🔒]” mode, only the Power button works.)
- To cancel the “Child Lock [🔒]” mode, you need to turn the power off and then on again.
- To cancel the “dE” mode, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold the Rinse and the Spin buttons simultaneously for at least 3 seconds.

Adding laundry when Child Lock is on

- To add laundry, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold the Rinse and the Spin buttons simultaneously for at least 3 seconds. See “Pause Option” on page 23 for additional details.

Deactivating the Child Lock function

Press and hold both the **Rinse** and **Spin** buttons simultaneously for approximately 3 seconds.

- When you deactivate the Child Lock function, the “Child Lock [🔒]” is lamp is turned off.
- The Child Lock function prevents children or the infirm from accidently operating the washer and injuring themselves.

WARNING
- If a child enters the washing machine, the child may become trapped and suffocate.

CAUTION
- Once you have activated the Child Lock function, it continues working even if the power is turned off.
- Opening the door by force can result in injury or damage to the product.

To add laundry after you have activated the Child Lock function, you must first pause or deactivate the Child Lock function.

WA186DSHASU-02703E_EN_130131.indd Sec5:20 2013-01-31 □□ 5:57:37

Sound Off

The Sound Off function can be selected during all cycles. When this function is selected, sound is turned off for all cycles. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Of function, hold down the **Last Setting** and **Delay Start** buttons at the same time for 3 seconds. The "Sound Off" indicator will light up when this feature is activated.

Delay Start

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 19 hours (in 1 hour increments). The hour displayed indicates the time when the wash will finish.

1. Add your laundry loosely into the drum without overfilling it.
2. Press the **Power** button to turn the power on.
3. Select the appropriate cycle and options for the load.
4. Press the **Delay Start** button repeatedly until the delay time is set.
5. Press the **Start/Pause** button.
   The "Delay Start" indicator will light up, and the clock will begin counting down until it reaches the set time.
6. To cancel the Delay Start function, turn the washing machine off and then turn it on again by pressing the **Power** button.

WA186DSHASU-02703E_EN_130131.indd Sec5:21 2013-01-31 □□ 5:57:38

Smart Check

This function enables you to check the status of the washing machine using a smartphone.

The Smart Check function has been optimized for:

- Galaxy S and Galaxy S2
- iPhone 4 and iPhone 4S

Downloading the Samsung Smart Washer app

Download the Samsung Smart Washer app to your mobile phone from the Android market or Apple App store and install it. You can easily find it by searching for "**Samsung Smart Washer**".

Using the Smart Check function

1. Hold down the **Water Lavel** and **Water Supply** buttons at the same time for 3 seconds when an error occurs to run the Smart Check function. Alternatively, the Smart Check function can be run if no button is pressed after the washing machine is turned on.
2. The LED segments on the display panel rotate for 2 or 3 seconds and the Smart Check code is displayed on the washing machine's display panel.
3. Run the Samsung Smart Washer app on your smart phone and tap the Smart Check button.

'Smart Check' may be changed to 'Smart Care' according to the language selection.

4. Focus your smart phone's camera on the Smart Check code displayed on the washing machine's display panel.

- If light from a light bulb, fluorescent bulb or lamp is reflected on the display panel of the washing machine, the smart phone may not be able to easily recognize the Smart Check code.
- If you hold the smart phone at a too wide angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smart phone so that the front of the display panel and the smart phone are parallel or nearly parallel.

5. If it focuses correctly, the Smart Check code is automatically recognized, and the detailed information of the status of your washing machine, the error and the countermeasures are displayed on your smart phone.
6. If the smart phone fails to recognize the Smart Check code more than twice, please enter the Smart Check code displayed on your washing machine's display panel into the Samsung Smart Washer app manually.

WA186DSHASU-02703E_EN_130131.indd Sec5:22 2013-01-31 □□ 5:57:38

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Press the **Power** button.
2. Open the door.
3. Load the articles of clothing one at a time loosely into the drum, without overfilling it.
4. Add detergent, softener, and/or bleach (if necessary) to the appropriate compartments. See pages 24~25.
5. Close the door.
6. Use the Cycle Selector to select the appropriate cycle according to the type of material: Fuzzy, Quick Wash, Delicate, Towels, Silent, Rinse+Spin, Spin, Tub Clean, 40 °C / 60 °C Magic Clean, Baby Care, Bedding, Heavy Soil. The relevant indicators will illuminate on the control panel.
7. At this time, you can control the wash temperature, the number of rinse cycles, the spinning speed, and the delay time by pressing the appropriate option button.
8. Press the Start/Pause button on the Cycle Selector and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WA186DSHASU-02703E_EN_130131.indd Sec5:23 2013-01-31 □□ 5:57:38

washing a load of laundry

WHICH DETERGENT TO USE

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent use

- The use a good quality top loader detergent is recommended.
- It is also important to:

  Pre–treat stains before washing.

  Sort clothes by color.

  Sort clothes by the amount of soiling.

  Avoid overloading.

Powdered detergent should be thoroughly dissolved in a small amount of warm water before adding to the machine.

Reducing the amount of detergent used may reduce the effectiveness of the cleaning action.

WA186DSHASU-02703E_EN_130131.indd Sec5:24 2013-01-31 □□ 5:57:38

FEATURES

Automatic dispenser

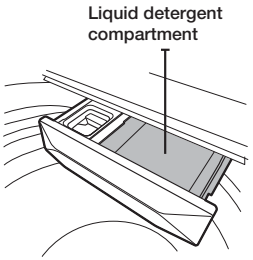

CAUTION

- Sprinkling powdered detergent directly onto the laundry may cause the laundry to discolor. Make sure to add the detergent into the detergent compartment.
- When the water temperature or pressure is too low or only hot water is supplied, the detergent may not dissolve completely.
- Do not put foreign objects into the detergent compartment. The detergent compartment may become clogged.

It is recommended adding detergent into the detergent compartment and then running the washing machine.

Loading the Fabric softener compartment

1. Add fabric softener to just below the guide line.
2. After adding fabric softener into the compartment, close the compartment carefully so that it does not overflow.
3. The fabric softener is automatically applied during the last rinse cycle. Please add fabric softener into the compartment before running the washing machine.

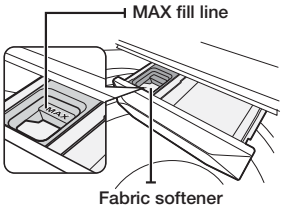

- If you add fabric softener over the guide line, it may overflow.

CAUTION

- Add normal fabric softener.
  (If you add sticky softener such as that for a drum washing machine, the softener compartment may be contaminated or the softener may remain in the compartment.)
- In case of highly-condensed softener, the softener may not be added to the water in areas with low tap water pressure.
- In areas with low tap water pressure, add the softener directly into the washing tub because the softener may not be added into the tub automatically.

WA186DSHASU-02703E_EN_130131.indd Sec8:25 2013-01-31 □□ 5:57:38

maintaining your washer

CLEANING THE EXTERIOR

Turn off the water faucets after finishing the day's washing.

This will shut off the water supply to your Washer and prevent the unlikely possibility of damage from escaping water. Leave the door open to allow the inside of your Washer to dry out.

Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.

Clean the following as recommended:

Control Panel – Clean with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panel.

CLEANING THE INTERIOR

Clean the interior of your Washer periodically to remove any dirt, soil, odor, mold, mildew, or bacterial residue that may remain in your Washer as a result of washing clothes.

Failure to follow these instructions may result in unpleasant conditions, including odors and/or permanent stains on your Washer or laundry.

Hard water deposits may be removed, if needed. Use cleaners labeled "Washer safe".

STORING YOUR WASHER

Washers can be damaged if water is not removed from hoses and internal components before storage. Prepare your Washer for storage as follows:

- Select the Quick Wash cycle and add bleach to the automatic dispenser. Run your Washer through the cycle without a load.
- Turn the water faucets off and disconnect the inlet hoses.
- Unplug your Washer from the electrical outlet and leave your Washer door open to let air circulate inside the tumbler.
- If your Washer has been stored in below–freezing temperatures, allow time for any leftover water in your Washer to thaw out before use.

PRESERVING THE TOP COVER AND THE FRONT FRAME

Do not place any heavy or sharp objects or a detergent box on the washing machine. They can scratch or damage the top cover of the unit.

Since the entire washing machine has a high-gloss finish, the surface can be scratched or damaged. Avoid scratching or damaging the surface when using the washing machine.

WA186DSHASU-02703E_EN_130131.indd Sec8:26 2013-01-31 □□ 5:57:38

CLEANING THE DISPENSERS

1. Pull the detergent/softener compartment forward.
2. Wipe off any residual detergent on the detergent compartment with a toothbrush.
3. When you are finished cleaning, close the detergent/softener compartment.

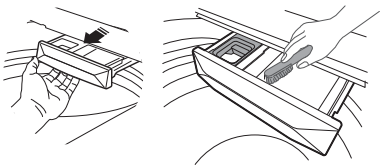

CAUTION If the blue part inside the softener compartment is not installed, the softener will not be applied automatically.

DIAMOND (MAGIC) FILTER

1. Press the top of the Diamond (Magic) filter down and then pull it forward to separate it. Then open the cover.

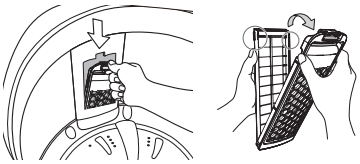

2. Remove the residue from the filter.

3. Wash the filter with water.

4. Reinstall the Diamond (Magic) filter.
   Align and insert the bottom and then insert the top of the filter.
   [Press the top of the filter down until it makes a clicking sound.]
   Insert the filter in the correct direction (front and back).

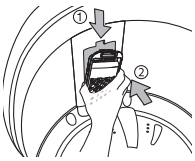

If the holes of the Diamond (Magic) filter are clogged, foreign substances may be stuck to the laundry.
For a clean wash, clean the filter a few times every week to keep at least half of the filter clean.

WA186DSHASU-02703E_EN_130131.indd Sec8:27 2013-01-31 □□ 5:57:38

troubleshooting

CHECK THESE SOLUTIONS IF YOUR WASHER...

PROBLEM	SOLUTION
Will not start.	• Make sure the door is closed. • Make sure your Washer is plugged in. • Make sure the water source faucets are open. • Make sure to press the Start/Pause Button to start your Washer. • Make sure Child Lock is not activated. See page 20. • Before your Washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain. • Check the fuse or reset the circuit breaker
Has no water or not enough water..	• Turn both faucets on fully. • Straighten the water inlet hoses. • Disconnect hoses and clean the screens. Hose filter screens may be clogged. • Open and close the door, then press the Start/Pause Button.
Has detergent remaining in the automatic dispenser after the wash cycle is complete.	• Make sure your Washer is running with sufficient water pressure.
Vibrates or is too noisy.	• Make sure your Washer is set on a level surface. If the surface is not level, adjust your Washer feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your Washer is not touching any other object. • Make sure the laundry load is balanced.
Stops	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door and press the Start/Pause Button to start your Washer. For your safety, your Washer will not spin unless the door is closed. • Before your Washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain. • There may be a pause or soak period in the cycle. Wait and it may start. • Check the screens on the inlet hoses at the faucets for obstructions. Clean the screens periodically.

WA186DSHASU-02703E_EN_130131.indd Sec10:28 2013-01-31 □□ 5:57:40

PROBLEM	SOLUTION
Fills with the wrong temperature water.	• Turn both faucets on fully. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct faucets. Flush water lines. • Disconnect the hoses and clean the screens. The hose filter screens may be plugged. • As your Washer is filling, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While your Washer is filling, you may notice just hot and/or just cold water going through the dispenser when you have selected cold or warm wash temperatures. This is a normal function of the automatic temperature control feature as your Washer determines the temperature of the water.
Door locked or will not open.	• Press the Start/Pause Button to stop your Washer. • It may take a few moments for the door lock mechanism to disengage.
Does not drain and/or spin.	• Check the fuse or reset the circuit breaker. • Straighten the drain hoses. Eliminate kinked hoses. If there is a drain restriction, call for service. • Close the door and press the Start/Pause Button. For your safety, your Washer will not spin unless the door is closed.
Load is too wet at the end of the cycle.	• Use the High or Extra High spin speed. • Use high efficiency detergent to reduce over–sudsing. • The Load is too small. Very small loads (one or two items) may become unbalanced and not spin out completely.
Leaks water.	• Make sure all hose connections are tight. • Make sure the end of the drain hose is correctly inserted and secured to the drainage system. • Avoid overloading. • Use high efficiency detergent to prevent over–sudsing.
Has excessive suds.	• Use high efficiency detergent to prevent over-sudsing. • Reduce the detergent amount for soft water, small or lightly soiled loads. • Non-HE detergent is NOT recommended.

WA186DSHASU-02703E_EN_130131.indd Sec10:29 2013-01-31 □□ 5:57:40

troubleshooting

INFORMATION CODES

The Washer may display information codes to help you understand what is occurring with your Washer better.

CODE SYMBOL	MEANING	SOLUTION
	Unbalanced load prevented your Washer from spinning.	Redistribute the load, press the Start/Pause Button.
	Door is open when Washer is running.	Close the door tightly and restart the cycle. If the code reappears, call for service.
	Your Washer failed to lock the door.	Close the door tightly and restart the cycle. If the code reappears, call for service.
	Water temperature control problem. (Heater Control problem)	Call for service.
	Your Washer has tried to fill but has not reached the proper water level.	Call for service.
	The door will not unlock.	Make sure the door is firmly closed. Push the Power button to turn off your Washer, then turn it on again. If the code reappears, call for service.
	Motor not running properly.	Restart the cycle pressing the Start/Pause Button. If the code reappears, call for service.
	Your washer is not draining. It can also mean that the unit senses a small clog while draining.	Do the following: 1) Turn off the unit and turn it on again. 2) Select only the Spin Cycle. 3) Press the Start/Pause to drain the water. If it still does not drain, call for service.
	Your Washer has tried to fill but was unsuccessful.	Make sure the water faucets are open all the way. Check for kinked hoses. Check the inlet screens on the fill hoses. If you use a Flood Safety Device, then please remove the device and connect the water hoses directly to the unit.
	Check if the hot water supply hose is connected.	You must connect the hot water supply hose because hot water is supplied by the Auto Temperature Control (A.T.C.) function.
	The hot/cold water hose connection is not correct.	Please connect the hot/cold water hose connection correctly.
	A fault is detected in the water level sensor.	Call for service
	Jammed Key.	Call for service
	Temperature sensor problem.	Restart the cycle. If the code reappears, call for service.

WA186DSHASU-02703E_EN_130131.indd Sec10:30 2013-01-31 □□ 5:57:40

3E	High current detected.	Restart the cycle. If the code reappears, call for service.
SUdS	Too much suds has been detected during the washing cycle. The unit pauses until the suds dissapate. Then, the unit will go back into operation. When it finishes washing, End and the SUdS code will blink in turn.	To prevent, reduce the amount of detergent.

For any codes not listed above, call contact Samsung Customer Service or your Samsung dealer.

WA186DSHASU-02703E_EN_130131.indd Sec10:31 2013-01-31 □□ 5:57:41

appendix

FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for washing, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		**Special Instructions**		**Warning Symbols for Laundering**	
	Normal		Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control		Drip Dry		Do Not Wring
	Gentle/Delicates		Dry Flat		Do Not Bleach
	Hand Wash	**Heat Setting**			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
●●●	Hot		Medium		Do Not Iron
●●	Warm		Low	**Dryclean**	
●	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	**Iron-Dry or Steam Temperatures**			Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High		Drip Dry
	Tumble Dry Cycle		Medium		Dry Flat
Normal			Low		For machine-washable wool. Loads should be under 8 pounds.
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 105 - 125 °F / 41 - 52 °C, for Warm 85 - 105 °F / 29 - 41 °C and for Cold 60 - 85 °F / 16 - 29 °C. (Wash water temperature must be a minimum of 60 °F / 16 °C for detergent activation and effective cleaning.) The clothes Washer can not ensure these temperatures because the actual temperature of the water entering your Washer depends on water heater settings and regional water supply temperatures. For example, cold water entering the home during winter may be 40 °F / 4 °C which is too cold for effective cleaning. In this situation, you will need to adjust the water temperature by selecting a warm setting, adding some hot water to the MAX FILL line, or using your Washer's heating option, if available.

WA186DSHASU-02703E_EN_130131.indd Sec4:32 2013-01-31 □□ 5:57:41

CYCLE CHART

Use this chart to set the best cycle and options for your laundry.

WA186DSHASU

(●: factory setting, ○: selectable)

	Functions														
	Power Wave			Water Level									Water Supply		
	High	Medium	Low	1	2	3	4	5	6	7	8	9	Hot	Hot/Cold	Cold
Fuzzy	○	●	○	○	○	○	○	○	○	○	○	○	○	○	●
Quick Wash	○	●	○	○	○	○	○	○	○	○	○	○	○	○	●
Delicate	-	-	●	○	○	●	○	○	○	○	○	○	-	●	○
Towels	-	●	-	○	○	○	○	●	○	○	○	○	○	●	○
Silent	-	○	●	○	○	○	○	●	○	○	○	○	○	○	●
Rinse+Spin	-	●	-	○	○	○	○	●	○	○	○	○	○	○	●
Spin	-	-	-	-	-	-	-	-	-	-	-	●	-	-	-
Tub Clean	-	●	-	-	-	-	-	●	-	-	-	-	-	●	-
60 °C Magic Clean	-	●	-	○	○	●	○	○	-	-	-	-	○	●	○
40 °C Magic Clean	-	●	-	○	○	●	○	○	-	-	-	-	○	●	○
Baby Care	-	-	●	○	○	○	○	○	○	○	○	○	○	○	●
Bedding	●	-	-	○	○	○	○	○	○	●	○	○	○	○	●
Heavy Soil	●	○	○	○	○	○	○	○	○	○	○	○	○	●	○

	Options					
	Wash	Rinse	Spin	Soak	Last Setting	Delay Start
Fuzzy	○	○	○	○	○	○
Quick Wash	○	○	○	○	○	○
Delicate	-	-	-	-	○	○
Towels	○	○	○	○	○	○
Silent	○	○	○	○	○	○
Rinse+Spin	-	○	○	-	○	○
Spin	-	-	○	-	○	○
Tub Clean	-	-	-	-	○	○
60 °C Magic Clean	○	○	○	-	○	○
40 °C Magic Clean	○	○	○	-	○	○
Baby Care	○	○	○	●	○	○
Bedding	○	○	○	○	○	○
Heavy Soil	○	○	○	●	○	○

WA186DSHASU-02703E_EN_130131.indd Sec4:33 2013-01-31 □□ 5:57:41

appendix

HELPING THE ENVIRONMENT

- Your Washer is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATION

TYPE	FRONT LOADING WASHER	
DIMENSIONS	Div	Inches (mm)
	A. Height	44.6" (1135)
	B. Width	27" (686)
	C. Height with door open	57.5" (1462)
	D. Depth	28.6" (728)

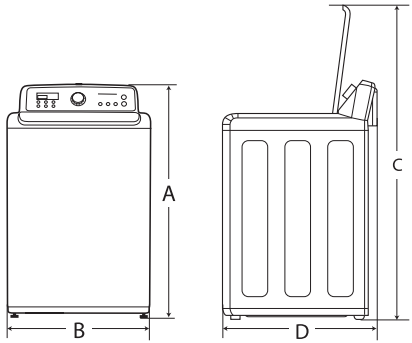

WATER PRESSURE		20-116 psi (137-800 kPa)	
WEIGHT		69 kg (152.1lb)	
WATER VOLUME		120 ℓ	
POWER CONSUMPTION	WASHING	220 V	700 W
	WASHING AND HEATING	220 V	1400 W
	SPIN	220 V	400 W
	DRAIN	220 V	30 W
SPIN REVOLUTION	WA186DSHASU	730 rpm	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WA186DSHASU-02703E_EN_130131.indd Sec4:34 2013-01-31 □□ 5:57:41

memo

WA186DSHASU-02703E_EN_130131.indd Sec4:35 2013-01-31 □□ 5:57:41

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Saudi Arabia	9200-21230	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)

Code No. DC68-02703E_EN

WA186DSHASU-02703E_EN_130131.indd Sec4:36 2013-01-31 □□ 5:57:41

WA186DSHASU

غسالة ملابس
دليل المستخدم

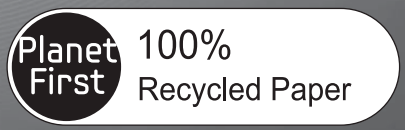

تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة ١٠٠٪.

إمكانات هائلة

شكراً لشرائك أحد منتجات Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء
تسجيل المنتج على الموقع
www.samsung.com/register

SAMSUNG

WA186DSHASU-02703E_AR_130131.indd 1 1/31/2013 6:00:50 PM

الميزات الأساسية لغسالتك الجديدة

١. VRT® (تقنية تقليل الاهتزازات)

تعمل غسالة Samsung بهدوء عند سرعات التنشيف القصوى، مما يعمل على الحد من صدور ضوضاء أو حدوث اهتزازات.

٢. السعة الكبيرة

يتم غسيل البطاطين وحتى الملابس الضخمة على نحو فائق. حيث تتيح السعة الكبيرة التي تتميز بها هذه الغسالة غسيل جميع العناصر بشكل فائق وتام.

٣. Tub Clean (تنظيف الحوض)

إمكانية تنظيف حاوية الغسالة من خلال الضغط على زر واحد فقط! وقد تم تصميم وظيفة Tub Clean (تنظيف الحوض) خصيصًا لإزالة أي بقايا للمساحيق وتراكمات الأوساخ في الحوض دون الحاجة إلى استخدام مساحيق كيميائية خاصة.

٤. التصميم الأنيق

ينسجم التصميم الأنيق لهذه الغسالة مع ديكورك الخاص.

٥. قرص مركزي لتغيير البرامج

يتيح قرص تغيير البرامج تحديد الدورات في كلا الاتجاهين بسهولة.

٦. محرك تشغيل مباشر

القدرة على غسل أي شيء! يعمل محرك التشغيل العكسي المباشر على توصيل التيار الكهربي مباشرةً إلى حوض الغسل من محرك معكوس الدوران ذي سرعات متغيرة. وتصل سرعة دوران محرك التشغيل المباشر الذي لا يحتوي على سير إلى ١١٠٠ لفة في الدقيقة للحصول على تشغيل أكثر كفاءة وهدوءًا. كما تحتوي الغسالة على أجزاء متحركة أقل من غسالات Samsung الأخرى، مما يعني إصلاحات أقل.

٧. الغطاء الزجاجي المقوى

يتميز الغطاء الزجاجي المقوى بأنه قوي ويتيح رؤية ما بداخل الغسالة بسهولة.

٨. مفتاح غلق الغطاء

يتم غلق غطاء الغسالة أثناء التشغيل. ويمكن إلغاء غلق الغطاء بالضغط على الزر Start/Pause (تشغيل/توقف) لإيقاف الغسالة.

WA186DSHASU-02703E_AR_130131.indd Sec9:2 1/31/2013 6:01:08 PM

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء استقطاع الوقت الكافي وقراءة هذا الدليل للانتفاع بكافة فوائد الغسالة وميزاتها.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها.

الرموز والاحتياطات المهمة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات جسدية بالغة أو الوفاة**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات طفيفة للأفراد أو تلف في الممتلكات**.
تنبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرّض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتّبع الإرشادات بعناية.
	افصل قابس التيار الكهربي من مأخذ الحائط.
	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرّض لصدمة كهربية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا، يرجى اتباعها بعناية.

وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.

اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر، كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربية والأجزاء المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

WA186DSHASU-02703E_AR_130131.indd Sec1:3 1/31/2013 6:01:08 PM

معلومات السلامة

احتياطات السلامة الهامة

تقليل احتمالات نشوب حريق أو التعرض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:

تحذير

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها، حيث إنه لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

يمكن أن يستخدم الأطفال بدءًا من سن ٨ سنوات الغسالة بالإضافة إلى الأشخاص ممكن يعانون من إعاقات جسدية أو عقلية أو حسية أو تنقصهم المعرفة أو الخبرة ولكن إذا تم الإشراف عليهم وإرشادهم فيما يتعلق باستخدامها بطريقة آمنة فضلاً عن استيعابهم للمخاطر المحتملة. يجب ألا يعبث الأطفال بالغسالة. ويجب ألا يقوم الأطفال بتنظيف الغسالة أو الصيانة القابلة للإجراء بواسطة المستخدم إلا تحت إشراف.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف سلك أو قابس التيار الكهربي، يجب استبداله بواسطة الجهة المصنعة أو وطيل خدمة أو شخص مؤهل على نحو مماثل.

يجب وضع الجهاز بالقرب من قابس التيار الكهربي، وصنابير تزويد الماء وأنابيب تصريف الماء، بحيث يسهل الوصول إليها.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

يرجى استخدام الخراطيم الجديدة. ولا تستخدم الخراطيم القديمة.

WA186DSHASU-02703E_AR_130131.indd Sec1:4 1/31/2013 6:01:09 PM

تحذيرات التركيب الهامة

قم بتوصيل سلك التيار الكهربي بمأخذ حائط لتيار متردد يبلغ ٢٢٠ فولت / ٦٠ هرتز بقدرة ١٥ أمبير أو أعلى. استخدم المأخذ لتوصيل هذه الغسالة به فقط. بالإضافة إلى ذلك يجب، عدم استخدام سلك تمديد.

- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو تمديد سلك التيار الكهربي إلى التعرض لصدمة كهربية أو نشوب حريق.
- لا تستخدم محولاً كهربيًا. قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- تأكد من مطابقة فولطية التيار الكهربي والتردد والتيار مع مواصفات المنتج. قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

استعن بفني مؤهل أو شركة خدمة لتركيب هذه الغسالة.

- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.

- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

أدخل قابس التيار الكهربي بمأخذ الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك ناحية الأرض.

- إذا قمت بإدخال قابس التيار الكهربي في المأخذ في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

يجب إجراء التوصيل الأرضي بشكل سليم.
لا تقم بالتوصيل الأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.

- قد ينتج عن إجراء التوصيل الأرضي بشكل غير سليم إلى حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- لا تقم مطلقًا بتوصيل سلك التيار الكهربي بمأخذ لم يتم توصيله أرضيًا بشكل سليم. وتأكد من أن إجراء التوصيل الأرضي الخاص بالمأخذ الذي تستخدمه وفقًا للقوانين المحلية والقومية.

لا تقم بتركيب هذه الغسالة بالقرب من سخان أو مواد قابلة للاشتعال.
لا تقم بتركيب هذه الغسالة في أجواء رطبة أو زيتية أو مكان به أتربة أو معرض لأشعة الشمس المباشرة أو الماء (بما في ذلك قطرات المطر).
لا تقم بتركيب هذه الغسالة في مكان قد يتسرب به الغاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لذا، تأكد من توصيل سلك التيار الكهربي بمأخذ الحائط بإحكام. لا تستخدم قابس طاقة أو سلك طاقة تالفًا أو مقبس حائط غير مُحكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تجذب سلك التيار الكهربي أو تثنيه بقوة.
ولا تقم بلفه أو طيه.
ولا تعلقه فوق شيء معدني أو تضع شيئًا ثقيلاً فوقه أو تمرره بين أشياء أو تدفعه في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تجذب سلك التيار الكهربي عند فصل قابس التيار الكهربي.

- افصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

في حالة تلف الجهاز أو قابس التيار الكهربي أو سلك التيار الكهربي، اتصل بأقرب مركز صيانة.

WA186DSHASU-02703E_AR_130131.indd Sec1:5 1/31/2013 6:01:09 PM

معلومات السلامة

تنبيهات التركيب

ضع الغسالة بحيث يمكن الوصول إلى قابس التيار الكهربي بسهولة.
- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- قد يؤدي عدم الالتزام بذلك إلى حدوث اهتزازات أو حَركات أو ضوضاء أو مشكلات غير معتادة بالمنتج.

يجب فصل قابس التيار الكهربي عند عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

تحذيرات الاستخدام الهامة

إذا فاض الماء من الغسالة، قم بفصل التيار الكهربي على الفور واتصل بأقرب مركز خدمة.
إذا صدرت ضوضاء غريبة من الغسالة أو رائحة احتراق أو دخان، قم بفصل مقبس الطاقة على الفور واتصل بأقرب مركز خدمة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المُسال، وما إلى ذلك)، يجب تهوية المكان على الفور. لا تقم بتشغيل أو إيقاف تشغيل أي جهاز أو إضاءة.
- لا تستخدم مروحة تهوية.
- قد تحدث شرارة وتؤدي إلى حدوث صدمة كهربية أو نشوب حريق.

يجب عدم غسل العناصر الملوثة بالجازولين أو الكيروسين أو البنزين أو مرقق الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/العصر عند درجة حرارة عالية).
- قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة. وقد يؤدي ذلك إلى حدوث إصابات.
- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو حدوث إصابة.

تأكد من إزالة الغلاف (الإسفنج / الفوم) الموجود أسفل الغسالة قبل الاستخدام.

لا تضع يدك تحت الغسالة.
- قد ينتج عن ذلك حدوث إصابات.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.
- قد ينتج عن هذا الأمر التعرض لصدمة كهربية.

يجب عدم إيقاف تشغيل الغسالة بفصل قابس التيار الكهربي أثناء تشغيلها.
- قد يؤدي إدخال قابس التيار الكهربي مرة أخرى في مأخذ الحائط إلى حدوث شرارة ينتج عنها صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال، نظرًا لأنها قد تمثل خطرًا عليهم.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة دون إشراف.
- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يدك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.
- قد ينتج عن ذلك حدوث إصابات.

WA186DSHASU-02703E_AR_130131.indd Sec1:6 1/31/2013 6:01:09 PM

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.
- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني، وما إلى ذلك) خلاف المنصهر القياسي.
- إذا كنت في حاجة إلى إصلاح الغسالة أو إعادة تركيبها، اتصل بأقرب مركز خدمة.
- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

في حالة دخول أي مادة غريبة، مثل الماء إلى الغسالة من أي مكان آخر غير الحوض، قم بفصل قابس التيار الكهربي واتصل بأقرب مركز صيانة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

عندما يصبح خرطوم تزويد الماء غير محكم الربط من ناحية الصنبور وينتج عنه تسرب ماء إلى داخل الجهاز، قم بفصل قابس التيار الكهربي.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

تنبيه تنبيهات الاستخدام

عندما يعلق بالغسالة مادة غريبة، مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، افصل قابس التيار الكهربي ونظّف الغسالة باستخدام قطعة قماش رطبة وناعمة.
- قد يؤدي عدم الالتزام بذلك إلى حدوث تغيير في ألوان الغسالة أو تشويه أو تلف أو صدأ بها.

قد ينكسر الزجاج الأمامي نتيجة لحدوث اصطدام قوي. ولذلك يجب الحرص عند استخدام الغسالة.
- قد تحدث إصابة عندما ينكسر الزجاج.

عند حدوث فشل في تزويد الماء أو عند إعادة توصيل خرطوم تزويد الماء، يجب فتح الصنبور ببطء.
يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.
- قد يؤدي ضغط الهواء في خرطوم تزويد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو حدوث تسرب للماء.

في حالة حدوث خطأ بالتصريف أثناء التشغيل، تحقق من عدم وجود مشكلة تتعلق بالتصريف.
- قد يؤدي استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق نتيجة لحدوث تسرب كهربي.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.
- قد يؤدي تعلق الملابس بالباب إلى تلف الملابس أو الغسالة، كما قد ينتج عنه حدوث تسرب للماء.

تأكد من إغلاق الصنبور في حالة عدم استخدام الغسالة.
- تأكد من تثبيت وصلات خرطوم تزويد الماء على نحو صحيح.
- قد يؤدي عدم الالتزام بذلك إلى تلف الجهاز أو حدوث إصابات.

يجب فتح الصنبور والتحقق من ربط وصلة خرطوم تزويد الماء بإحكام وعدم وجود تسريب للماء قبل استخدام الغسالة.
- في حالة عدم إحكام وصلات خرطوم تزويد الماء، قد يحدث تسريب للماء.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

WA186DSHASU-02703E_AR_130131.indd Sec1:7 1/31/2013 6:01:09 PM

معلومات السلامة

لا تقف فوق الجهاز أو تضع أشياء فوقه (مثل ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد كيماوية أو أشياء معدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

لا تقم بتشغيل الغسالة ويدك رطبة.

- قد ينتج عن هذا الأمر التعرض لصدمة كهربية.

يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.

- بالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج.

لا تضع شيئًا ينتج عنه مجال كهرومغناطيسي بالقرب من الغسالة.

- قد ينتج عن هذا حدوث إصابات شخصية نتيجة وجود خلل في وظائف التشغيل.

نظرًا لأن الماء الذي يتم تصريفه أثناء الغسل بدرجات حرارة عالية أو أثناء دورة التجفيف يكون ساخنًا، يجب عدم لمسه.

- قد ينتج عن هذا الأمر حدوث حروق أو إصابات شخصية.

لا تقم بغسل مفروشات المقاعد أو السجاد أو الأقمشة المقاومة للماء أو عصرها أو تجفيفها*.

- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.

قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.

* أشياء يجب عدم غسلها: المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الحفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة جسدية نتيجة لتسرب الماء.

لا تضع يدك في درج موزع المسحوق بعد فتحه.

- فقد يؤدي ذلك إلى حدوث إصابة بيديك.

تجنب وضع أي أشياء غير الملابس مثل الأحذية وبقايا الطعام والحيوانات داخل الغسالة.

- فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية قد تتلف الغسالة بالإضافة إلى إصابة بالغة أو الوفاء للحيوانات.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة، مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات سائلة، والتي توجد في متاجر المستحضرات الجلدية أو عيادات التدليك عادةً.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسرب الماء.

يجب عدم ترك أي أشياء معدنية (مثل الدبابيس أو دبابيس الشعر أو مواد التبييض، وغيرها) في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة بدء ظهور الصدأ على سطح الحوض، قم بتنظيف سطحه باستخدام سائل تنظيف محايد وإسفنج في تنظيفه. ولا تستخدم فرشاة معدنية مطلقًا.

لا تستخدم سائل تنظيف جاف بشكل مباشر، ولا تغسل الملابس أو تشطفها أو تجففها في حالة إضافة مسحوق تنظيف جاف إليها.

- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

WA186DSHASU-02703E_AR_130131.indd Sec1:8 1/31/2013 6:01:09 PM

لا تستخدم صابون غسل يدين متعادل بالغسالة.

- في حالة تراكمه وتصلبه داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغير الألوان أو الصدأ أو انبعاث روائح كريهة.

لا تغسل عناصر الغسيل كبيرة الحجم، مثل المفروشات، في شبكة الغسيل.

- قد يؤدي عدم الالتزام بذلك إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.
- ضع الأشياء الصغيرة مثل الجوارب الناعمة والملابس الداخلية النسائية في شبكة الغسيل.

لا تستخدم مسحوق غسيل متيبس.

- قد يحدث تسرب للماء في حالة تراكم هذا المسحوق المتيبس داخل الغسالة.

لا تقم بغسيل السجاد السميك ومسحة الأحذية.

- إذا قمت بغسل السجاد السميك ومسحة الأحذية، فستتراكم جزيئات الأتربة داخل الغسالة، مما قد يؤدي إلى حدوث مشكلة مثل عدم تصريف الماء.

إرشادات التنظيف الهامة

لا تنظف الغسالة عن طريق رش الماء فوقها مباشرةً.
لا تستخدم مادة تنظيف حمضية قوية.
لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الغسالة.

- قد ينتج عن هذا الأمر حدوث تغير في الألوان أو تشويه أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

WA186DSHASU-02703E_AR_130131.indd Sec1:9 1/31/2013 6:01:11 PM

المحتويات

تركيب الغسالة ١١

١١ **إخراج الغسالة من الصندوق**
١١ **نظرة عامة حول الغسالة**
١٢ كهربائيًا
١٢ التوصيل الأرضي
١٢ الماء
١٣ وسيلة الصرف
١٣ التثبيت الأرضي
١٣ الاعتبارات المكانية
١٣ تركيب القنطرة أو الخزانة
١٤ الأبعاد اللازمة للتركيب
١٥ **ملاحظة هامة للشخص الذي سيقوم بالتركيب**

إرشادات التشغيل ١٧

١٧ **املأ الغسالة بالملابس**
١٧ **بدء العمل**

غسل الملابس ١٨

١٨ **شكل لوحة التحكم**
٢٠ Child Lock (قفل الأطفال)
٢١ Sound Off (إيقاف تشغيل الصوت)
٢١ Delay Start (بدء متأخر)
٢٢ Smart Check (الإختيار الذكي)
٢٣ غسل الملابس باستخدام قرص اختيار الدورة
٢٤ **مسحوق الغسيل الذي يمكن استخدامه**
٢٥ **الميزات**
٢٥ الموزّع التلقائي
٢٥ تحميل درج منعّم الأقمشة

صيانة الغسالة ٢٦

٢٦ **تنظيف الأسطح الخارجية**
٢٦ **تنظيف الأسطح الداخلية**
٢٦ **تخزين الغسالة**
٢٦ **الحفاظ على الغطاء العلوي والإطار الأمامي**
٢٧ **تنظيف الموزّع**
٢٧ **المصفاة الماسية (السحرية)**

استكشاف المشاكل وحلها ٢٨

٢٨ **تحقق مما يلي إذا كانت الغسالة...**
٣٠ **رموز المعلومات**

الملحق ٣٢

٣٢ **جدول العناية بالأقمشة**
٣٣ **جدول الدورات**
٣٤ **حماية البيئة**
٣٤ **بيان التوافق**
٣٤ **المواصفات**

WA186DSHASU-02703E_AR_130131.indd Sec6:10 1/31/2013 6:01:11 PM

تركيب الغسالة

إخراج الغسالة من الصندوق

أخرج الغسالة من الصندوق وافحصها للتأكد من عدم تعرضها لأي تلف أثناء الشحن. وتأكد من وجود جميع العناصر الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

لمنع حدوث إصابة جسدية أو بقع، قم بارتداء قفازات واقية عند رفع الغسالة أو حملها.

⚠ تنبيه قد تشكل مواد التعبئة خطورة على الأطفال؛ لذا احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين... الخ) بعيدًا عن متناول الأطفال.

نظرة عامة حول الغسالة

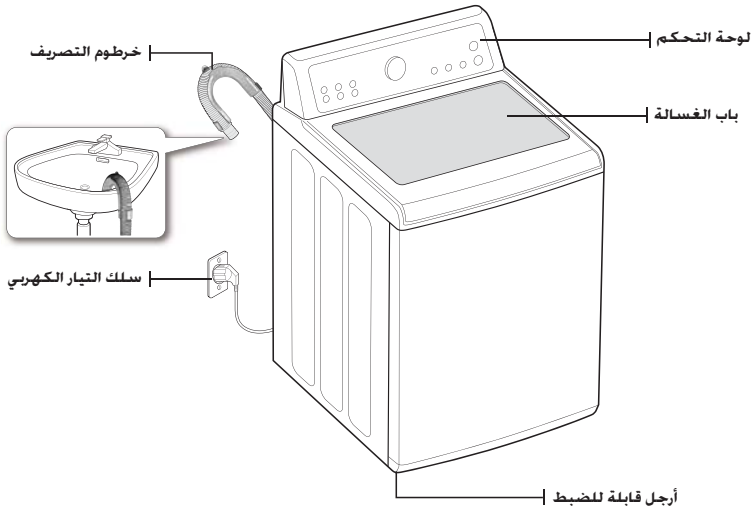

الأجزاء المرفقة

حامل الخرطوم

أداة ربط

دليل المستخدم


خرطوم تزويد الماء

شريط ربط الخرطوم البلاستيكي

الأدوات اللازمة

زرادية


مفك برغي مسطح

WA186DSHASU-02703E_AR_130131.indd Sec3:11 1/31/2013 6:01:11 PM

تركيب الغسالة

متطلبات المكان الأساسية

كهربائيًا

- قاطع دائرة كهربائية أو منصهر بقدرة ٢٢٠ فولت / ٦٠ هرتز
- يوصى باستخدام دائرة كهربية فرعية منفصلة لتشغيل الغسالة فقط.
- يتم تزويد الغسالة بسلك للطاقة.

تنبيه: لا تقم مطلقًا باستخدام سلك تمديد.

التوصيل الأرضي

يلزم إجراء توصيل أرضي لهذه الغسالة.

يجب إجراء توصيل أرضي لهذه الغسالة. وفي حالة حدوث ضعف في الأداء أو تعطل، سيؤدي التوصيل الأرضي إلى تقليل خطورة الصعق الكهربي وذلك بتوفير مسار من المقاومة للتيار الكهربي.

يتم تزويد الغسالة بسلك للطاقة به قابس طرف أرضي بثلاثة سنون لاستخدامه في أي مأخذ أرضي تم تركيبه بشكل صحيح.

يجب توصيل القابس في منفذ التوصيل المناسب مع عمل التوصيل الأرضي وذلك طبقاً للقوانين والضوابط المحلية.

تنبيه: يمكن أن يؤدي استخدام موصل أرضي غير سليم مع الجهاز الموصل إلى زيادة خطر حدوث صدمة كهربائية. قم بالتحقق من ذلك من خلال الفني المتخصص أو المشرف على ذلك إذا لم تكن متأكدًا من صحة التوصيل الأرضي للجهاز. ممنوع تغيير القابس المخصص للجهاز - وفي حالة عدم ملاءمته مع مأخذ التيار، يفضل تركيب مأخذ التيار المناسب بواسطة الفني المتخصص.

احتياطات السلامة الهامة

- لتفادي خطر حدوث حريق أو التعرض لصدمة كهربية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقًا لأحدث نسخة من اللائحة الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. يتحمل مالك هذا الجهاز مسؤولية توفير الصيانة الكهربائية الكافية للجهاز.

تنبيه: لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

الماء

لملء الغسالة الخاصة بك على نحو صحيح في معدل الوقت الملائم، يلزم توفر ضغط للماء يتراوح بين ٢٠ إلى ١١٦ رطل / بوصة مربعة (١٣٧ إلى ٨٠٠ كيلوباسكال).

قد يؤدي ضغط الماء الذي يقل عن ٢٠ رطل / بوصة مربعة إلى حدوث خلل في صمام الماء أو عدم السماح بغلق صمام الماء بشكل تام أو إطالة وقت الملء بما يزيد عن حدود التحكم في الغسالة مما يؤدي إلى إيقاف تشغيلها. حيث يتم تضمين حد الوقت في عناصر التحكم لمنع الماء من أن يفيض في منزلك إذا حدث ارتخاء في الخرطوم.

يجب أن تكون صنابير الماء خلف الغسالة بمقدار ٤ أقدام/١٢٢ سم لتتلائم مع خراطيم دخول الماء المرفقة مع الغسالة.

تتوفر خراطيم ملحقة للماء بأطوال مختلفة تصل إلى ١٠ أقدام/٣٠٥ سم لاستخدامها مع صنابير الماء التي تبعد بشكل كبير عن خلفية الغسالة.

لتجنب حدوث أي مشكلات تتعلق بالماء:

- استخدم صنابير ماء يسهل الوصول إليها
- أغلق صنابير الماء في حالة عدم تشغيل الغسالة.
- تحقق بشكل دوري من عدم وجود تسرب من تركيبات خراطيم دخول الماء.

تحذير: تحقق من جميع وصلات صمام الماء والصنبور للتأكد من عدم وجود أي تسربات..

WA186DSHASU-02703E_AR_130131.indd Sec3:12 1/31/2013 6:01:13 PM

وسيلة الصرف

توصي شركة Samsung باستخدام ماسورة رأسية بارتفاع ٣٩ بوصة/ ٩٩ سم. ويجب تمرير خرطوم التصريف من خلال ماسك خرطوم التصريف حتى يصل إلى الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لتسمح بإدخال القطر الخارجي لخرطوم التصريف. الذي يقوم المصنّع بإرفاقه.

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. علمًا بأن الأسطح الخشبية قد تحتاج إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتوازنة. تكون طريقة بسط السجاد على الأرضيات بالإضافة إلى أسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة العصر.

لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

الاعتبارات المكانية

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء. حيث إن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة ومناطق من الخرطوم. وقد يؤدي الماء المتجمد إلى تلف السيور والمضخة والخراطيم والمكونات الأخرى.

تركيب القنطرة أو الخزانة

أدنى مساحة خالية لتركيب القنطرة أو الخزانة:

الجوانب ـــ ١ بوصة / ٢٥ مم

الخلفية ـــ ٦ بوصة / ١٥٢ مم

مقدمة الخزانة - ٢ بوصة / ٥١ مم

الجانب العلوي - ٢١ بوصة / ٥٣٣ مم

يتم تركيب الغسالة والمجفف معًا. ويجب توفر فتحة هواء خالية من أي عوائق بحجم ٧٢ بوصة مربعة على الأقل (٤٦٥ سم^2) بمقدمة الخزانة. علمًا بأن الغسالة لا تتطلب فتحة هواء خاصة.

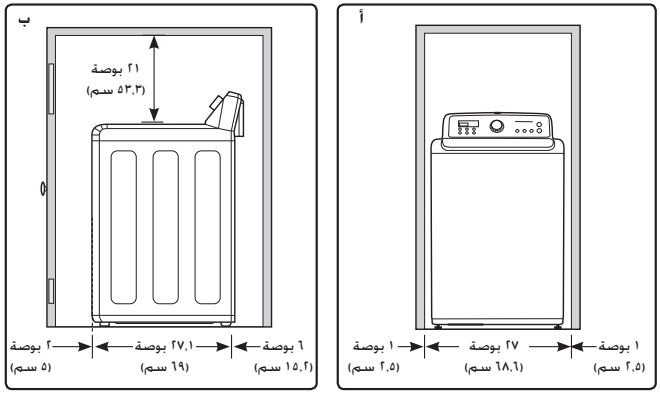

أ. منطقة ارتداد

ب. منظر جانبي - الخزانة أو منطقة محددة

WA186DSHASU-02703E_AR_130131.indd Sec3:13 1/31/2013 6:01:14 PM

تركيب الغسالة

الأبعاد اللازمة للتركيب

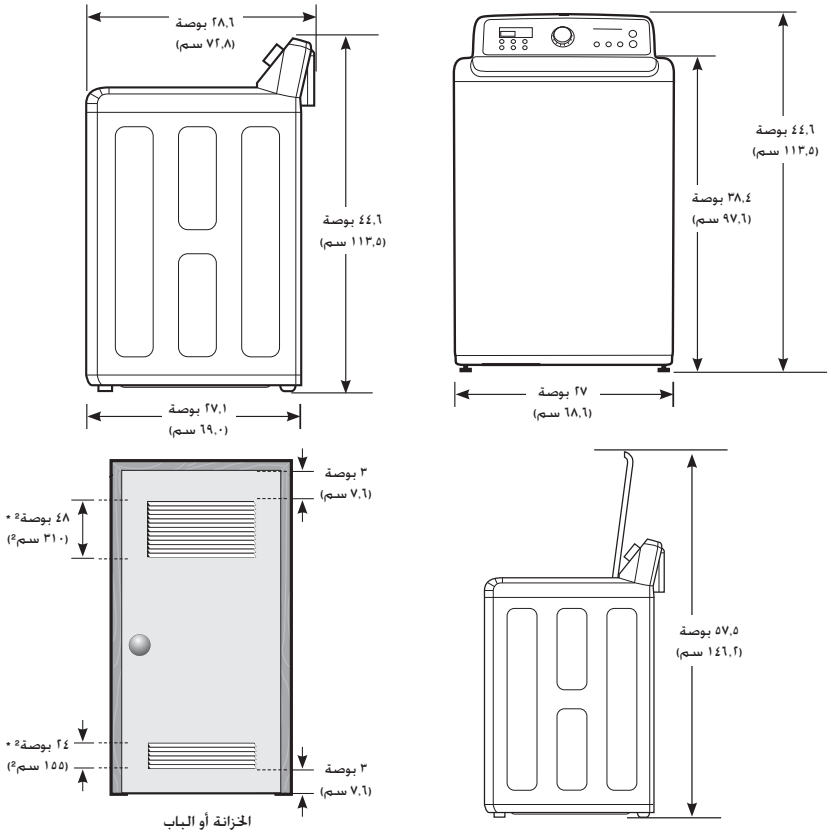

الخزانة أو الباب

• التباعد اللازم ** يتطلب مرفق العوادم الخارجي مساحة إضافية.

WA186DSHASU-02703E_AR_130131.indd Sec3:14 1/31/2013 6:01:14 PM

ملاحظة هامة للشخص الذي سيقوم بالتركيب

يرجى قراءة الإرشادات التالية بعناية قبل تركيب الغسالة.
يجب الحفاظ على هذه الإرشادات للرجوع إليها في المستقبل.
ونوصي بالاستعانة بفني محترف لتركيب هذه الغسالة.

الخطوة ١
تحديد المكان

تأكد من اختيار مكان يتمتع بما يلي قبل تركيب الغسالة:

- سطح صلب ومستو دون وجود سجاد أو أرضية قد تعوق عملية التهوية.
- الخلو من الأتربة أو الزيت أو المساحيق. إلخ.
- البعد عن أشعة الشمس المباشرة
- التهوية الكافية
- عدم القابلية للتجمد (لا تقل درجة الحرارة به مطلقًا عن ٣٢ فهرنهايت أو ٠ درجة مئوية)
- البعد عن مصادر الحرارة مثل البترول أو الغاز
- ارتخاء سلك التيار الكهربي بشكل كافٍ.
- الخلو من أي سجاجيد قد تعوق فتحات التهوية.

الخطوة ٢
تركيب الغسالة

١. إذا قمت باستخدام ماسورة رأسية، تأكد من أن الوصلة بين خرطوم التصريف والماسورة الرأسية "غير" محكمة السد. ويجب أن تكون الماسورة الرأسية على ارتفاع ٣٩ بوصة أو ٩٩ سم على الأقل.

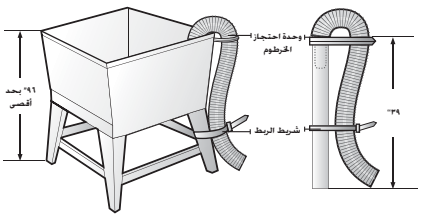

يجب عليك توخي الحذر لتجنب تلف خرطوم التصريف أو سقوطه. وللحصول على أفضل النتائج، يجب عدم إعاقة خرطوم التصريف بأي طريقة - عن طريق المرافق أو الوصلات أو الارتفاع الزائد. وفي الحالات التي لا يتاح بها رفع خرطوم التصريف بشكل ملائم بمقدار ٣٩ بوصة أو ٩٩ سم، يجب استخدام دعامة مع الخرطوم.

لا تقم بإدخال خرطوم التصريف في الماسورة الرأسية بشكل زائد: ٦ - ٨ بوصة ولا تزيد عن ذلك.

WA186DSHASU-02703E_AR_130131.indd Sec3:15 1/31/2013 6:01:15 PM

تركيب الغسالة

٢. افحص خراطيم دخول الماء للتأكد من وجود الوصلة بكل الوصلات الخاصة بخراطيم الملء.
ضع خراطيم دخول الماء في وصلات صنابير الماء HOT (ساخن) وCOLD (بارد). وعند الطرف الآخر من الخرطوم، ابحث عن الوصلة المطاطية للخرطوم وقم بتركيب كل خرطوم ملء بصمام الماء. تأكد من توصيل الخرطوم المميز بعلامة الماء الساخن بصنبور الماء HOT (ساخن). قم بربطه بيديك حتى يثبت ثم زد الربط بمعدل ثلثي دورة باستخدام زرادية.

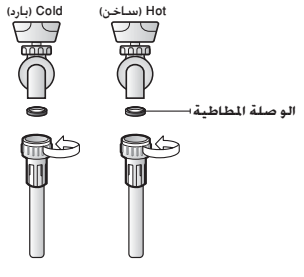

لاستخدام الماء بشكل صحيح، قم بتوصيل صمامي الماء HOT (ساخن) و COLD (بارد). في حالة عدم توصيل أي منهما أو كلاهما، قد يحدث خطأ "4E" (لم يحدث الملء).

٣. قم بتشغيل التزويد بالماء "HOT" (ساخن) و"COLD" (بارد) وافحص جميع وصلات صمامات الماء والصنابير للتأكد من عدم وجود تسرب.

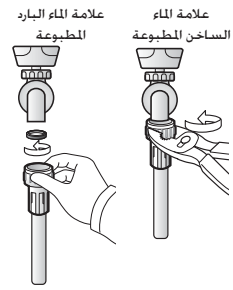

٤. قم بتوصيل سلك التيار الكهربي بمأخذ كهربائي معتمد بثلاثة سنون ٢٢٠ فولت / ٦٠ هرتز، ثم توصيله أرضيًا بشكل سليم ومحمي بواسطة قاطع دائرة كهربائية قابل للمقارنة.
يتم توصيل الغسالة الخاصة بك أرضيًا من خلال السن الثالث لسلك التيار الكهربي عند التوصيل بالمقبس الذي تم توصيله أرضيًا المزود بثلاثة سنون.

٥. قم بتحريك الغاسلة إلى الموضع المحدد.

٦. اجعل الغسالة مستوية عن طريق لف أقدام ضبط الاستواء إلى الداخل والخارج يدويًا كما هو مطلوب.

يجب أن تكون الغسالة مستقرة من الأمام والخلف والجانبين. استخدم مسواة النجار لتسوية الغسالة من جوانبها الأربعة. ومن الجيد استخدامه أيضًا للتأكد من ثبات الغسالة بعد إجراء عمليات الغسيل الأولى.

اختبار التشغيل

تأكد من تركيب الغسالة بشكل صحيح من خلال تشغيل دورة **Rinse+Spin (شطف+دوران)** (شطف+دوران) بعد إكمال التركيب.

WA186DSHASU-02703E_AR_130131.indd Sec3:16 1/31/2013 6:01:15 PM

إرشادات التشغيل

املأ الغسالة بالملابس

- يمكنك ملء الحوض بالملابس الجافة غير المطوية. "ولكن لا تحمل الحوض تحميلاً زائدًا". ولا تزيد عن ٤/٣ معدل الملء.
- قد يقلل وضع ملابس بشكل متكدس من كفاءة الغسيل. ويسبب حدوث تهالك للغسيل والغسالة. ويمكن أن يسبب ثني أو تجعيد للغسيل.
- قم بغسيل الأشياء مثل حمالات الصدر الجوارب النسائية والملابس النسائية الداخلية الأخرى في دورة Delicate (ملابس رقيقة) مع الأشياء خفيفة الوزن المماثلة.
- عند القيام بغسل الأشياء كبيرة الحجم أو الضخمة أو الأشياء الأصغر في الحجم التي لا تتسبب في ملء الحوض تماماً - بطانية، أو وسادة، أو دمي محشوة، أو جاكت واحد أو اثنين على سبيل المثال.-.قم بإضافة مناشف قليلة لتحسين أداء التجفيف بالتدوير والتنشيف.

أثناء دورة الدوران، قد تضيف الغسالة كمية إضافية من الماء لإعادة توزيع الملابس وتصحيح عدم التوازن داخل الحاوية.

- عند غسيل أشياء متسخة بشدة، لا تقم بتحميل الغسالة تحميلاً زائدًا للتأكد من الحصول على نتائج تنظيف جيدة.
- لإضافة عناصر منسية:
  ١. اضغط على الزر **Start/Pause (تشغيل/توقف)** (تشغيل/توقف) لإيقاف تشغيل الغسالة مؤقتًا.
  ٢. انتظر حتى يتم إلغاء غلق الباب تلقائيًا ثم افتح الباب.
  ٣. أضف العنصر، ثم أغلق الباب ثم اضغط على الزر **Start/Pause (تشغيل/توقف)** (تشغيل/توقف). سيتم استئناف الدورة.

بدء العمل

١. املأ الغسالة بالملابس.
٢. قم بإضافة مسحوق ومواد إضافية في الموزع (راجع الصفحتين ٢٤ و٢٥).
٣. حدد الدورة والخيارات المناسبة للكمية (راجع الصفحتين ١٨ و١٩).
٤. أغلق الباب.
٥. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
٦. سيضيء مؤشر الغسيل.
٧. سيظهر وقت الدورة المقدر في شاشة العرض.
قد يومض مؤشر الوقت للإشارة إلى الوقت المتبقي في الدورة بطريقة أفضل.

قد يختلف الوقت الفعلي المطلوب للدروة عن الوقت المقدر على شاشة العرض وفقًا لضغط المياه ودرجة حرارتها ونوع المسحوق والغسيل.

٨. قبل أن تبدأ الغسالة في ملء الماء، ستصدر مجموعة من أصوات النقر للتحقق من غلق الباب والتصريف بسرعة.

- عند اكتمال الدورة، سينطفئ مؤشر Door Lock (غلق الباب) وستظهر كلمة "End" على شاشة العرض.
- يؤدي الضغط على الزر Power (طاقة) إلى إلغاء الدورة وإيقاف تشغيل الغسالة.
- يُضيء مؤشر Wash (غسيل) وRinse (شطف) وSpin (دوران) أثناء أجزاء هذه الدورة.

WA186DSHASU-02703E_AR_130131.indd Sec2:17 1/31/2013 6:01:16 PM

غسل الملابس

شكل لوحة التحكم

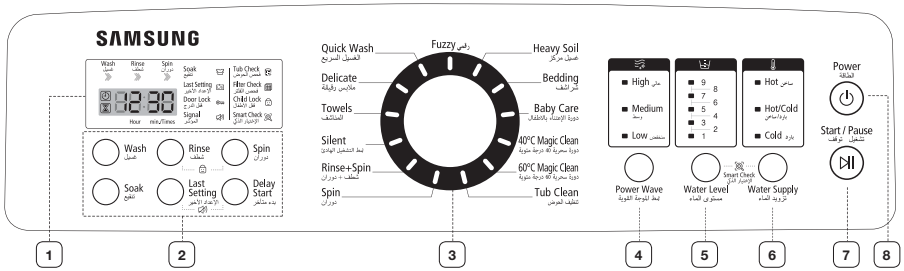

١ **شاشة العرض:**	توفر لك الإرشادات والتشخيصات فضلاً عن أحدث المعلومات المتعلقة بحالة الدورة والوقت المتبقي.
٢ **خيار الدورة المحدد**	اضغط على هذه الأزرار لتحديد الخيارات المختلفة لدورات الغسيل. **Wash (غسيل)** - اضغط على هذا الزر للقيام بدورة غسيل فقط أو لضبط وقت الغسيل. **Rinse (شطف)** - اضغط على هذا الزر للقيام بالشطف فقط أو لضبط عدد مرات الشطف. **Spin (دوران)** - اضغط على هذا الزر لتشغيل دورة الدوران فقط أو ضبط وقت التنشيف. يمكنك ضبط وقت التنشيف بين ١ إلى ٩ دقائق. عند تحديد دورة تنشيف واحدة فقط، سيختلف وقت التنشيف عن إجمالي الوقت المتبقي. ويرجع ذلك إلى أن الوقت الكلي المتبقي يتضمن وقت الدوران الفعلي ووقت تصريف الماء والإيقاف. **Soak (تنقيع)** - يمكنك ضبط وقت النقع بين ١٠ إلى ٦٠ دقيقة. **Last Setting (الإعداد الأخير)** - يحدد هذه الدورة لتحميل الإعدادات الخاصة بالدورة الأخيرة. قم بتشغيل دورة الغسيل باستخدام الإعدادات الأخيرة التي تم استخدامها دون الحاجة إلى إدخالها يدويًا مرة أخرى. يتم حفظ اختياراتك تلقائيًا عند الضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف). لاستخدام الدورة المحفوظة في الذاكرة، اضغط على الزر Last Setting (الإعداد الأخير) (الإعداد الأخير)، ثم اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/إيقاف مؤقت). **Delay Start (بدء متأخر)** - يعمل على تأجيل أي دورة حتى ١٩ ساعة بزيادة قدرها ساعة واحدة. تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٣ **قرص تحديد الدورة**	حدد الدورة المناسبة لكل نوع من أنواع الغسيل. تعمل الدورة التي تختارها على تحديد نوع التدوير وسرعة الدوران للدورة. للتقليل من كرمشة الغسيل، حدد الدورة Perm Press (منع تجعد الملابس). **Fuzzy (رقمي)** - لمعظم الأقمشة، بما في ذلك الأقطان والملابس الكتانية والملابس عادية الاتساخ. **Heavy Soil(غسيل مركز)** - استخدم هذه الدورة التي تضيف دورة Soak (تنقيع) (النقع) قبل دورة Wash (غسيل) (الغسل) لغسل بقع الملابس والأوساخ الشديدة. **Bedding (شراشف)** (شراشف) - للأشياء الضخمة، مثل البطانيات وملاءات الأسرّة. وعند غسل ألحفة، استخدم منظفًا سائلاً. **Baby Care (دورة الإعتناء بالأطفال)** - تغسل هذه الدورة الأشياء التي تُغسل بشكل متكرر مثل ملابس الأطفال والملابس الداخلية لمنع تلف الأقمشة فضلاً عن أنها تضيف المزيد من دورات الشطف لضمان النظافة. **٤٠ °C Magic Clean / ٦٠ C (دورة سحرية ٤٠ درجة مئوية / ٦٠ درجة مئوية)** - هذه الدورة تزيل الأوساخ بفاعلية باستخدام درجة حرارة المياه المخصصة.

WA186DSHASU-02703E_AR_130131.indd Sec5:18 1/31/2013 6:01:16 PM

	Tub Clean (تنظيف الحوض) (تنظيف الحوض)- استخدم هذه الدورة لتنظيف الحوض. فهي تؤدي إلى إبقاء الحوض نظيفًا ومعقمًا. **Quick Wash (الغسيل السريع)** - للملابس خفيفة الاتساخ التي تحتاجها بسرعة. **Delicate (ملابس رقيقة)** - هذه الدورة مصممة لغسل الملابس الخفيفة التي تتشوه أو تتلف بسهولة والمعاطف والسترات الصوفية التي تحتوي على علامة الغسل بالمياه. **Towels (المناشف)** - لمناشف الحمام ومناشف الوجه والمفارش. **Silent (نمط التشغيل الهادئ)** - تعمل هذه الدورة على خفض مستوى الضوضاء لدورات الغسيل ليلًا عن طريق خفض طاقة الدوران الخاصة بالمنتج. **Rinse+Spin (شطف+دوران)** - استخدم كميات الغسيل التي تحتاج إلى الشطف فقط أو تحتاج إلى إضافة منعم الأقمشة الذي يتم إضافته للغسيل. **Spin (دوران)** - عند تحديد دورة Spin (دوران) (الدوران) فقط. يختلف وقت التنشيف عن الوقت الإجمالي المتبقي. ويرجع ذلك إلى أن الوقت الإجمالي المتبقي يتضمن وقت الدوران الفعلي ووقت تصريف الماء وإيقاف الغسالة.
٤ **الزر Power Wave (نمط الموجة القوية)**	يمكنك تحديد نوع تدفق الماء. Medium (متوسط) ← High (عال) ← Low (منخفض) ← Medium (متوسط) يمكنك تغيير الإعداد وفقًا للدورة. يتعذر تغيير الإعداد أثناء تشغيل دورة Spin (دوران) (الدوران).
٥ **الزر Water Level (مستوى الماء)**	يتم ضبط مستوى الماء تلقائيًا. ومع ذلك، يمكنك تحديد مستوى الماء يدويًا بالضغط على هذا الزر.
٦ **الزر Water Supply (تزويد الماء)**	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات الغسيل: بارد ← ساخن/بارد← ساخن ← بارد لتغيير خيارات الماء، قم بإيقاف تشغيل وظيفة (الماء الفضي).
٧ **زر تحديد Start/Pause (تشغيل/إيقاف مؤقت)**	اضغط لإيقاف الدورات مؤقتاً وإعادة تشغيلها.
٨ **الزر Power (الطاقة)**	اضغط عليه مرة لتشغيل الغسالة. اضغط عليه مرة أخرى لإيقاف تشغيل الغسالة. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق بينما تكون قيد التشغيل، يتم إيقاف تشغيلها تلقائيًا.

WA186DSHASU-02703E_AR_130131.indd Sec5:19 1/31/2013 6:01:16 PM

غسل الملابس

Child Lock (قفل الأطفال)

يمنع Child Lock (قفل الأطفال) (قفل الأطفال) الأطفال من العبث بالغسالة.

تنشيط وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)

اضغط باستمرار على الزرين **Rinse (شطف)** (شطف) و **Spin (دوران)** (دوران) معًا لمدة ٣ ثوان تقريبًا.

- عند تنشيط وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، يومض مؤشر "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال).

استخدام وظيفة Child Lock (قفل الأطفال) (الاختيار الذكي)

إذا تم فتح الباب عند تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، تظهر "dE" وتصدر أصوات تنبيه.

- إذا تم غلق الباب عند ظهور "dE"، فإن أصوات التنبيه تتوقف ويتحول رمز المعلومات "dE" إلى "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال).
- تبدأ الغسالة، بعد مرور ٣٠ ثانية من عرض "dE"، في التصريف الاضطراري.
- إذا تم فصل التيار الكهربي وتم تشغيل Child Lock (قفل الأطفال) (قفل الأطفال) وتم فتح الباب لمدة ٣٠ ثانية، فإن الغسالة تعرض الرمز "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال) وتقوم بتصريف ما بداخلها بشكل اضطراري.
- بعد التصريف الاضطراري، تومض شاشة عرض "CL" لمدة ثانية ويتحول المنتج إلى الوضع "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال)". عندما يكون المنتج في الوضع "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال)، يتوقف الزر Power (الطاقة) (طاقة) فقط عن العمل.)
- لإلغاء "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال)، يلزمك فصل التيار وإعادة تشغيله مرة أخرى.
- لإلغاء وضع "dE"، قم بإيقاف تشغيل وظيفةChild Lock (قفل الأطفال) (قفل الأطفال). لإلغاء تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، اضغط باستمرار على الزرين Rinse (شطف) (شطف) و Spin (دوران) (دوران) معًا لمدة ثلاث ثوان على الأقل.

إضافة الغسيل عند تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)

- لإضافة الغسيل، قم بإيقاف تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال). لإيقاف تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، اضغط باستمرار على الزرين Rinse (شطف) (شطف) و Spin (دوران) (دوران) معًا لمدة ثلاث ثوان على الأقل. ارجع إلى "خيار الإيقاف المؤقت" في الصفحة ٢٣ للحصول على تفاصيل إضافية.

إلغاء تشغيل وظيفة Child Lock (قفل الأطفال)

اضغط باستمرار على الزرين **Rinse (شطف)** (شطف) و **Spin (دوران)** (دوران) معًا لمدة ثلاث ثوان تقريبًا.

- عند إلغاء تشغيل وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، يتوقف وميض "Child Lock (قفل الأطفال) [🔒]" (قفل الأطفال).
- تمنع وظيفة Child Lock (قفل الأطفال) (قفل الأطفال) الأطفال وذوي الاحتياجات الخاصة من تشغيل الغسالة عن طريق الخطأ أو جرح أنفسهم.

⚠ تنبيه
- إذا أدخل طفل نفسه داخل الغسالة، ربما ينحشر جسده داخلها ويختنق.

⚠ تنبيه
- بمجرد تنشيط وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، ستستمر في العمل حتى بعد فصل التيار.
- قد يؤدي فتح الباب بالقوة إلى حدوث إصابة جسدية أو تلف المنتج.

لإضافة غسيل بعد تنشيط وظيفة Child Lock (قفل الأطفال) (قفل الأطفال)، يجب إيقاف وظيفة Child Lock (قفل الأطفال) مؤقتًا أو إيقاف تشغيلها.

WA186DSHASU-02703E_AR_130131.indd Sec5:20 1/31/2013 6:01:16 PM

Sound Off (إيقاف تشغيل الصوت)

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) (إيقاف تشغيل الصوت) أثناء كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التنشيط /إلغاء التنشيط

إذا كنت تريد تنشيط وظيفة Sound Off (إيقاف تشغيل الصوت)، اضغط على الزرين **Last Setting (الإعداد الأخير)** (الإعداد الأخير) و **Delay Start (بدء متأخر)** (بدء متأخر) لمدة ٣ ثوان. سيضيء مؤشر "Sound Off (إيقاف تشغيل الصوت)" (إيقاف تشغيل الصوت) عندما يتم تنشيط هذه الميزة.

Delay Start (بدء متأخر)

يمكنك ضبط الغسالة لإجراء عملية الغسل تلقائيًا في وقت لاحق عن طريق اختيار تأجيل الوقت من ١ ساعات حتى ١٩ ساعة.(بزيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.

١. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.

٢. اضغط على الزر **Power (الطاقة)** (طاقة) لبدء التشغيل.

٣. حدد الدورة والخيارات المناسبة لنوع الغسيل.

٤. اضغط على الزر **Delay Start (بدء متأخر)** (بدء متأخر) بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.

٥. اضغط على الزر **Start/Pause (تشغيل/توقف)** (تشغيل/إيقاف مؤقت).
سيضيء مؤشر"Delay Start (بدء متأخر)"، وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.

٦. لإلغاء وظيفة Delay Start (بدء متأخر) (بدء متأخر)، قم بإيقاف تشغيل الغسالة ثم أعد تشغيلها مرة أخرى بالضغط على الزر **Power (الطاقة)** (طاقة).

WA186DSHASU-02703E_AR_130131.indd Sec5:21 1/31/2013 6:01:18 PM

غسل الملابس

Smart Check (الإختيار الذكي)

تُمكنك هذه الوظيفة من اختيار حالة الغسالة من خلال الهاتف الذكي.

تم تحسين وظيفة Smart Check (الإختيار الذكي) (الاختيار الذكي) لما يلي:

- Galaxy S و Galaxy S۲
- iPhone ٤ و iPhone ٤S

تنزيل تطبيق تطبيق Samsung Smart Washer

قم بتنزيل تطبيق تطبيق Samsung Smart Washer إلى الهاتف المحمول من Android market أوApple App store ثم ثبّته. يمكنك العثور بسهولة عليه بالبحث عن "**تطبيق Samsung Smart Washer**".

استخدام وظيفة Smart Check (الإختيار الذكي) (الاختيار الذكي)

١. اضغط على **Water Level (مستوى الماء)** (مستوى الماء) و **Water Supply (تزويد الماء)** (تزويد الماء) في نفس الوقت لمدة ٣ ثوان عند حدوث خطأ في تشغيل وظيفة Smart Check (الإختيار الذكي) (الاختيار الذكي). وبدلًا من ذلك، يمكن أن يتم تشغيل وظيفة Smart Check (الإختيار الذكي) (الاختيار الذكي) إذا لم يتم الضغط على أي زر بعد تشغيل الغسالة.

٢. تدور الأجزاء LED الظاهرة على لوحة العرض لمدة ثانيتين أو ثلاث ويتم عرض رمز Smart Check (الاختيار الذكي) على لوحة عرض الغسالة.

٣. قم بتشغيل تطبيق تطبيق Samsung Smart Washer على الهاتف الذكي الخاص بك ثم اضغط على الزر Smart Check (الإختيار الذكي).

'قد يتغير Smart Check (الإختيار الذكي) (الاختيار الذكي) إلى Smart Care (العناية الذكية) (دورة الاعتناء الذكي) وفقًا لتحديد اللغة.

٤. قم بتركيز كاميرا الهاتف الذكي على رمز Smart Check (الاختيار الذكي) الظاهر على لوحة عرض الغسالة.

- إذا أضاء مصباح أو مصباح فلوري أو مؤشر في لوحة التحكم، فقد يتعذر على الهاتف الذكي بسهولة على رمز Smart Check (الاختيار الذكي).
- إذا قمت بالضغط على الهاتف الذكي عند زاوية متسعة على لوحة العرض، فقد يتعذر التعرف على رمز الخطأ. للحصول على أفضل النتائج، اضغط على الهاتف الذكي بحيث يكون الجزء الأمامي للوحة العرض موازٍ للهاتف الذكي تمامًا أو إلى حد ما.

٥. إذا تم وضعه بشكل صحيح، يتم التعرف تلقائيًا على رمز Smart Check (الاختيار الذكي) ويتم عرض معلومات تفصيلية حول حالة الغسالة والخطأ والإجراءات المضادة على الهاتف الذكي الخاص بك.

٦. إذا تعذر على الهاتف الذكي التعرف على رمز Smart Check (الاختيار الذكي) لأكثر من مرتين، فبرجاء إدخال رمز Smart Check (الاختيار الذكي) الظاهر على لوحة عرض الغسالة في تطبيق Samsung Smart Washer يدويًا.

WA186DSHASU-02703E_AR_130131.indd Sec5:22 1/31/2013 6:01:18 PM

غسل الملابس باستخدام قرص اختيار الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. وعند اختيار أحد برامج الغسل. تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. اضغط على الزر **Power (الطاقة)** (طاقة).

٢. افتح الباب.

٣. ضع الملابس قطعة تلو الأخرى في الحاوية دون تجاوز سعتها.

٤. أضف مسحوق الغسيل ومنعّم الأقمشة ومادة التبييض (عند الحاجة) في الأدراج المناسبة. راجع الصفحتين ٢٤ و٢٥.

٥. أغلق الباب.

٦. استخدم Cycle Selector (قرص تحديد الدورة) لتحديد الدورة المناسبة وفقاً لنوع المادة: Fuzzy (رقمي) (رقمي) و Quick Wash (الغسيل السريع) (الغسيل السريع) و Delicate (ملابس رقيقة) (ملابس رقيقة) و Towels (المناشف) (المناشف) و Silent (نمط التشغيل الهادئ) (نمط التشغيل الهادئ) و Rinse+Spin (شطف+دوران) (شطف+دوران) و Spin (دوران) (دوران) و Tub Clean (تنظيف الحوض) (تنظيف الحوض) و ٤٠ °C Magic Clean / ٦٠ C (دورة سحرية ٤٠ درجة مئوية / ٦٠ درجة مئوية) (دورة سحرية ٤٠/٦٠ درجة مئوية) و Baby Care (دورة الإعتناء بالأطفال) (دورة الاعتناء بالأطفال) و Bedding (شراشف) (شراشف) و Heavy Soil(غسيل مركز) (غسيل مركز). ستضيء المؤشرات الخاصة بالدورات على لوحة التحكم.

٧. وفي هذا الوقت. يمكنك التحكم في درجة حرارة الغسيل وعدد دورات الشطف وسرعة الدوران ووقت التأجيل عن طريق الضغط على زر الخيار المناسب.

٨. اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/إيقاف مؤقت) من Cycle Selector (قرص تحديد الدورة) وسوف تبدأ عملية الغسيل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على لوحة العرض.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل. يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.

٢. أخرج الملابس.

WA186DSHASU-02703E_AR_130131.indd Sec5:23 1/31/2013 6:01:18 PM

غسل الملابس

مسحوق الغسيل الذي يمكن استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف) والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دومًا مسحوق الغسيل ذي "الرغوة القليلة" والذي صُمم خصيصاً للغسالات الأوتوماتيكية.

اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، فاتصل بالهيئة المسئولة عن الماء.

لا تستخدم منظفًا صلبًا أو خشنًا لأنه قد يتبقى في دورة الشطف. قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح أو يتسبب في إعاقة تدفق الماء.

استخدام المسحوق

- يُنصح باستخدام مسحوق غسالات بجودة عالية.
- من المهم أيضًا القيام بما يلي:

عالج البقع قبل الغسيل

قم بفرز الملابس حسب اللون.

قم بفرز الملابس حسب درجة اتساخها.

تجنب التحميل الزائد.

تجنب إذابة مسحوق الغسيل في مقدار قليل من الماء الدافئ قبل إضافته إلى الغسالة.

قد يعمل تقليل كمية المسحوق المستخدم على خفض مستوى فعالية عملية التنظيف.

WA186DSHASU-02703E_AR_130131.indd Sec5:24 1/31/2013 6:01:18 PM

الموزع التلقائي

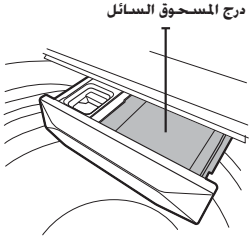

- تنبيه: قد ينتج عن رش مسحوق الغسيل مباشرة على الغسيل نزع ألوان الغسيل. تأكد من إضافة المسحوق داخل الدرج المخصص له.
- في حالة انخفاض درجة حرارة الماء أو الضغط أو عند التزويد بماء ساخن فقط، فقد تتعذر إذابة المسحوق تمامًا.
- لا تضع أشياء غريبة في درج المسحوق. فقد ينسد درج المسحوق.

يُنصح بإضافة المسحوق في الدرج المخصص، ثم تشغيل الغسالة.

تحميل درج منعّم الأقمشة

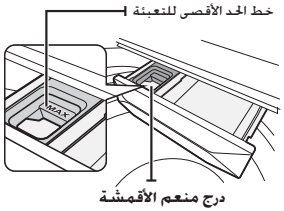

١. أضف منعّم الأقمشة أسفل الخط التوجيهي.
٢. بعد إضافة منعّم الأقمشة في الدرج، أغلق الدرج بعناية بحيث يقوم بمنع إعاقة التدفق.
٣. يستخدم منعّم الأقمشة تلقائيًا خلال آخر دورة من دورات الشطف. يُرجى إضافة منعّم الأقمشة إلى الدرج قبل تشغيل الغسالة.

- إذا قمت زادت كمية منعّم الأقمشة عن الخط التوجيهي، فقد يحدث إعاقة في التدفق.
- تنبيه: أضف منعّم الأقمشة العادي.
  (إذا قمت بإضافة منعّم لاصق مثل الذي يوضع لغسالة بها حاوية، فقد يتلوث درج المنعّم أو يظل في الدرج.)
- في حال إضافة منعّم عالي الكثافة، فقد تتعذر إضافة المنعّم إلى الماء في المناطق التي
- في المناطق التي يقل بها ضغط ماء الصنبور، أضف منعم الأقمشة مباشرة في حوض الغسالة فقد لا يتم إضافة منعم الأقمشة إلى الحوض تلقائيًا.

WA186DSHASU-02703E_AR_130131.indd Sec5:25 1/31/2013 6:01:18 PM

صيانة الغسالة

تنظيف الأسطح الخارجية

اقفل صنابير المياه بعد الانتهاء من غسيل اليوم.

حيث يعمل ذلك على توقف تزويد الغسالة بالماء ويمنع إمكانية حدوث التلفيات غير المحتملة نتيجة تسرب المياه. اترك الباب مفتوحًا حتى يجف الجزء الداخلي للغسالة.

استخدم قطعة قماش ناعمة لإزالة جميع مواد التنظيف والمبيّضات والمواد الأخرى.

نظّف الأجزاء التالية بالكيفية الموضّحة:

لوحة التحكم ـــ نظفها بقطعة قماش ناعمة ومبللة. لا تستخدم المساحيق الكاشطة أو ورق التنظيف. لا تقم برش المنظفات على اللوحة مباشرة.

تنظيف الأسطح الداخلية

نظّف الأسطح الداخلية للغسالة بشكل دوري لإزالة الأوساخ أو الفضلات أو الروائح الكريهة أو العفن أو الفطريات أو الفضلات البكتيرية التي قد تترسب داخل الغسالة بعد غسل الملابس.

قد يؤدي عدم الالتزام بهذه التعليمات إلى حدوث نتائج غير مرغوبة. مثل انبعاث روائح كريهة والتصاق بقع دائمة بالغسالة أو الملابس.

يمكنك إزالة رواسب الماء الساخن إذا أردت ذلك. استخدم المنظف الملصق عليه "التنظيف بأمان".

تخزين الغسالة

قد تتلف الغسالات في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين. قم بتجهيز الغسالة للتخزين كما يلي:

- حدد الدورة Quick Wash (غسل سريع) وأضف مادة التبييض إلى الموزّع التلقائي. قم بتشغيل الغسالة باستخدام هذه الدورة دون وجود ملابس بها.
- أغلق صنابير الماء وافصل خراطيم التزوّد بالماء.
- افصل الغسالة عن مأخذ التيار الكهربي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.
- في حالة تخزين الغسالة في درجات حرارة تحت درجات التجمد. اترك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها.

الحفاظ على الغطاء العلوي والإطار الأمامي

لا تضع أية أشياء ثقيلة أو حادة أو علبة المنظف فوق الغسالة. فقد تخدش الغطاء العلوي للوحدة أو تتلفه.

نظرًا لأن الغسالة بكاملها عالية اللمعة. يمكن أن يتعرّض سطحها للخدش أو التلف. ولذلك. حاول تجنب خدش السطح أو إتلافه عند استخدام الغسالة.

WA186DSHASU-02703E_AR_130131.indd 26 1/31/2013 6:01:18 PM

تنظيف الموزّع

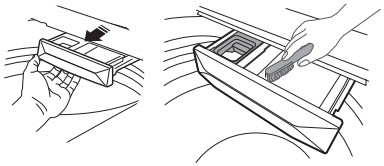

١. اسحب درج المسحوق/منعم الأقمشة إلى الأمام.
٢. امسح أي بقايا للمسحوق من درج المسحوق باستخدام فرشاة أسنان.
٣. عند الانتهاء من التنظيف، أغلق درج المسحوق/منعم الأقمشة.

تنبيه: في حالة عدم تركيب الجزء الأزرق في درج منعم الأقمشة، لن يتم إضافة منعم الأقمشة تلقائيًا.

المصفاة الماسية (السحرية)

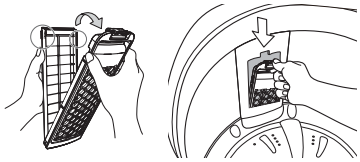

١. اضغط على الجانب العلوي من المصفاة الماسية (السحرية) ثم اسحبه إلى الأمام لفصله. ثم افتح الغطاء.

٢. قم بإزالة أي أوساخ من المصفاة.

٣. اغسل المصفاة بالماء.

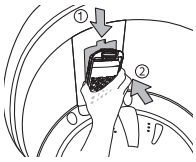

٤. أعد تركيب المصفاة الماسية (السحرية).
قم بمحاذاة الجانب السفلي وإدخاله ثم تركيب الجانب العلوي من المصفاة.
[اضغط على الجانب العلوي من المصفاة حتى يصدر صوت قرقعة.]
قم بتركيب المصفاة في الاتجاه الصحيح (الأمام والخلف).

في حالة انسداد المصفاة الماسية (السحرية)، قد تلتصق مواد غريبة بالغسيل. للحصول على غسيل نظيف، اغسل المصفاة بضع مرات في كل أسبوع للمحافظة على نظافتها بنصف المعدل على الأقل.

WA186DSHASU-02703E_AR_130131.indd 27 1/31/2013 6:01:18 PM

استكشاف المشاكل وحلها

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لا تعمل.	• تأكد من إغلاق الباب. • تأكد من توصيل قابس "الغسالة" بمصدر التيار الكهربي. • تأكد من أن صنابير المياه مفتوحة. • تأكد من الضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف) لتشغيل الغسالة. • تأكد من عدم تنشيط Child Lock (قفل الأطفال) (قفل الأطفال). راجع صفحة ٢٠. • قبل أن تبدأ الغسالة في ملء الماء، ستقوم بسلسلة من أصوات النقر للتحقق من إغلاق الباب والتصريف بسرعة. • افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية
لا تحتوي على ماء أو لا يوجد ماء كاف بها..	• افتح كلا الصنبورين بشكل كامل. • فك ثنيات خراطيم التزوّد بالماء. • افصل الخراطيم ونظّف الحواجز؛ فقد تكون حواجز المصفاة مسدودة. • افتح الباب ثم أغلقه، واضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف).
تحتوي على مسحوق متبقي في الموزّع التلقائي بعد انتهاء دورة الغسيل.	• تأكد من تشغيل الغسالة بضغط ماء كافٍ.
تهتز أو تحدث صوتًا مرتفعًا.	• تأكد من تركيب "الغسالة" على سطح مستو. إذا كانت الأرض غير مستوية، اضبط قائم الغسالة حتى تستقر في موضعها. • تأكد من فك مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
تتوقف	• قم بتوصيل سلك التيار الكهربي بمنفذ تيار كهربي مباشر. • افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية. • أغلق الباب ثم اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف) لتشغيل الغسالة. من أجل سلامتك، لن تدور الغسالة أو تقوم بالدوران إلا إذا كان الباب مغلقًا. • قبل أن تبدأ الغسالة في ملء الماء، ستقوم بسلسلة من أصوات النقر للتحقق من إغلاق الباب والتصريف بسرعة. • وقد تكون هناك فترة توقف أو نقع أثناء الدورة. انتظر قليلاً، فقد تبدأ العمل. • تحقق من عدم وجود عوائق في الحواجز الموجودة في الخراطيم وصنابير المياه. ونظّف الحواجز بشكل دوري.
تمتلئ الغسالة بماء بدرجة حرارة خاطئة.	• افتح كلا الصنبورين بشكل كامل. • تأكد من تحديد درجة الحرارة بشكل صحيح. • تأكد من توصيل الخراطيم بالصنابير الصحيحة.وتأكد من دفق الماء بالخراطيم. • افصل الخراطيم ونظّف الحواجز؛ فقد تكون حواجز المصفاة مسدودة. • أثناء ملء الغسالة، قد تتغير درجة حرارة المياه نظرًا لأن ميزة التحكم التلقائي في درجة الحرارة التلقائية تتحقق من درجة حرارة الماء الوارد. وبعد هذا أمرًا طبيعيًا. • أثناء ملء الغسالة، قد تلاحظ مرور الماء الساخن و / أو الماء البارد فقط من خلال الموزّع عند تحديد درجة حرارة الماء البارد أو الدافئ؛ وهذه وظيفة طبيعية لميزة التحكم التلقائي في درجة الحرارة نظرًا لأن الغسالة تقوم بتحديد درجة حرارة المياه.
باب الغسالة مغلق أو لا يمكن فتحه.	• اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف) لإيقاف الغسالة. • قد يستغرق الأمر دقائق قليلة حتى تتحرر آلية قفل الباب.

WA186DSHASU-02703E_AR_130131.indd Sec10:28 1/31/2013 6:01:21 PM

المشكلة	الحل
لا تقوم بالتصريف و/أو التنشيف.	• افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية. • فك ثنيات خراطيم التصريف. وتجنب استخدام الخراطيم الملتوية. إذا كانت هناك مشكلة تتعلق بالتصريف، فاتصل بخدمة الصيانة. • أغلق الباب ثم اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف). من أجل سلامتك، لن تدور الغسالة أو تقوم بالتنشيف إلا إذا كان الباب مغلقًا.
تظل الملابس مبتلة جدًا في نهاية الدورة.	• استخدم السرعة High (عالية) أو Extra High (عالية جدًا) للدوران. • استخدم مسحوقًا ذا فاعلية عالية لتقليل الرغوة الزائدة. • الأشياء المراد غسلها بالغسالة قليلة جدًا. قد تكون الأشياء القليلة جدًا (قطعة واحدة أو اثنتين) غير متوازنة ولا يتم تجفيفها بالكامل.
تسرب الماء.	• تأكد من إحكام جميع وصلات الخراطيم. • تأكد من إدخال طرف خرطوم التصريف وإحكامه بشكل صحيح في نظام التصريف. • تجنب التحميل الزائد. • استخدم مسحوقًا ذا فاعلية عالية لمنع الرغوة الزائدة.
تحتوي على رغوة زائدة.	• استخدم مسحوقًا ذا فاعلية عالية لمنع الرغوة الزائدة. • قلل كمية المسحوق عند استخدام ماء ساخن أو أحمال ملابس صغيرة أو خفيفة الاتساخ. • لا يفضل استخدام غير المساحيق ذات الفاعلية العالية.

WA186DSHASU-02703E_AR_130131.indd Sec10:29 1/31/2013 6:01:21 PM

استكشاف المشاكل وحلها

رموز المعلومات

قد يتم عرض رموز المعلومات للمساعدة في فهم الحادث داخل "الغسالة" على نحو أفضل.

رمز الكود	الدلالة	الحل
	يمنع الحمل غير المتوازن دوران الغسالة.	أعد توزيع الحمل ثم اضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف).
	يفتح الباب والغسالة قيد التشغيل.	أغلف الباب بإحكام وأعد تشغيل الدورة. إذا استمر ظهور الكود. فاتصل بخدمة الصيانة.
	الغسالة غير قادرة على غلق الباب.	أغلف الباب بإحكام وأعد تشغيل الدورة. إذا استمر ظهور الكود. فاتصل بخدمة الصيانة.
	مشكلة في التحكم في درجة حرارة الغسالة. (مشكلة في التحكم بالسخان)	اتصل بخدمة الصيانة.
	تحاول الغسالة القيام بالملء ولكن لم تصل إلى مستوى الماء الصحيح.	اتصل بخدمة الصيانة.
	لا يتم إلغاء غلق الباب.	تأكد من إغلاق الباب بإحكام. اضغط على الزر Power (الطاقة) (الطاقة) إيقاف تشغيل الغسالة ثم أعد تشغيلها مرة أخرى. إذا استمر ظهور الكود. فاتصل بخدمة الصيانة.
	لا يعمل المحرك بشكل صحيح.	أعد تشغيل الدورة بالضغط على الزر Start/Pause (تشغيل/توقف) (تشغيل/توقف). إذا استمر ظهور الكود. فاتصل بخدمة الصيانة.
	لا تقوم الغسالة بالتصريف. قد يعني ذلك أيضًا استشعار الغسالة لوجود انسداد صغير أثناء التصريف.	قم بما يلي: ١) إيقاف تشغيل الغسالة ثم إعادة تشغيلها مرة أخرى. ٢) حدد الدور Spin (دوران) (دوران) فقط. ٣) اضغط على Start/Pause (تشغيل/توقف) (تشغيل/توقف) لتصريف الماء. إذا استمرت مشكلة عدم التصريف. فاتصل بخدمة الصيانة.
	حاولت الغسالة القيام بالملء ولكن لم ينجح الأمر.	تأكد من فتح صنابير الماء تمامًا. افحص الخراطيم للتأكد من عدم التوائها. افحص حواجز خراطيم الملء. إذا كنت تستخدم "جهاز للسلامة من فيض الماء". فيرجيازالة الجهاز وتوصيل خراطيم الماء مباشرة بالغسالة.
	تأكد من توصيل خرطوم تزويد الماء الساخن.	يجب توصيل خرطوم تزويد الماء الساخن حيث يتم تزويد الماء الساخن بواسطة وظيفة "التحكم تلقائيًا في الحرارة" (A.T.C).
	إن وصلة خرطوم الماء الساخن/البارد غير صحيحة.	يرجى توصيل وصلة خرطوم الماء الساخن/البارد بشكل صحيح.
	تم اكتشاف عطل في مستشعر مستوى الماء.	اتصل بخدمة الصيانة.
	عطل في المفتاح.	اتصل بخدمة الصيانة.
	مشكلة في مستشعر درجة الحرارة.	أعد تشغيل الدورة. إذا استمر ظهور الكود. فاتصل بخدمة الصيانة.

WA186DSHASU-02703E_AR_130131.indd Sec10:30 1/31/2013 6:01:21 PM

رمز الكود	الدلالة	الحل
	تم اكتشاف تيار عالٍ.	أعد تشغيل الدورة. إذا استمر ظهور الكود، فاتصل بخدمة الصيانة.
	تم اكتشاف كمية كبيرة للغاية من الرغاوي أثناء دورة الغسيل. تتوقف الغسالة مؤقتًا حتى تختفي الرغاوي. ثم تقوم الغسالة باستئناف التشغيل مرة أخرى. عند الانتهاء من الغسيل، يومض الرمزين End وSUdS.	لمنع حدوث ذلك، قلل من كمية المسحوق.

في حالة ظهور أي رموز غير مدرجة أعلاه، اتصل بخدمة عملاء Samsung أو موزع تابع لـ Samsung.

WA186DSHASU-02703E_AR_130131.indd Sec10:31 1/31/2013 6:01:22 PM

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا خاصة بالغسيل والتبييض والتجفيف والكي أو التنظيف الجاف عند الضرورة. يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل		إرشادات خاصة		رموز تحذيرية في عملية الغسيل	
Normal (عادي)		تجفيف على الحبل/ تعليق للتجفيف		لا تغسل	
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة		التجفيف بالتعليق		لا تضغط	
الملابس الناعمة/الرقيقة		تجفف وهي مفرودة		لا تستخدم مادة تبييض	
Hand Wash (غسل يدوي)		إعدادات التسخين		لا تجفف بالتدوير	
درجة حرارة الماء**		عالي		لا يوجد بخار (يُضاف للكي)	
ساخن	●●●	Medium (متوسط)		ممنوع الكي	
Warm (دافئ)	●●	منخفض		تنظيف جاف	
بارد	●	أي درجة من السخونة		تنظيف جاف	
مادة تبييض		بدون تسخين/هواء		ممنوع استخدام التنظيف الجاف	
أي مادة تبييض (عند الحاجة)		التجفيف بالكي أو درجات حرارة البخار		تجفيف على الحبل/ تعليق للتجفيف	
خالي من الكلور فقط (لون آمن) مادة تبييض (عند الحاجة)		High (عالي)		التجفيف بالتعليق	
دورة تجفيف بالتدوير		Medium (وسط)		تجفف وهي مفرودة	
Normal (عادي)		منخفض		للملابس الصوفية التي يمكن وضعها في الغسالة. يجب أن يقل الحمل عن ٨ أرطال.	
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة					
الملابس الناعمة/الرقيقة					

** تمثل الرموز المنقطة درجات حرارة مياه الغسيل المناسبة لعناصر الملابس المختلفة. يتراوح نطاق درجة الحرارة الخاص بالوضع Hot (ساخن) بين ١٠٥ - ١٢٥ فهرنهايت / ٤١ - ٥٢ درجة مئوية وبالنسبة للوضع Warm (دافئ) فهو ٨٥ - ١٠٥ فهرنهايت / ٢٩ - ٤١ درجة مئوية وبالنسبة للوضع Cold (بارد) فهو ٦٠ - ٨٥ فهرنهايت / ١٦ - ٢٩ درجة مئوية. (يتعين أن يكون الحد الأدنى لدرجة حرارة ماء الغسيل ٦٠ فهرنهايت / ١٦ درجة مئوية لتنشيط المسحوق والتنظيف الفعال.) لا يمكن أن تضمن غسالة الملابس درجات الحرارة هذه حيث تعتمد درجة الحرارة الفعلية للماء الذي يدخل إلى الغسالة على إعدادات سخان الماء ودرجات حرارة التزويد بالماء الإقليمية. مثال، قد تبلغ درجة حرارة الماء البارد الذي يدخل إلى المنزل في الشتاء ٤٠ فهرنهايت / ٤ درجة مئوية مما يجعله بارد للغاية لإجراء تنظيف فعال. وفي هذه الحالة، ستحتاج إلى ضبط درجة حرارة الماء عن طريق تحديد الوضع الدافئ وإضافة بعض من الماء الساخن إلى خط MAX FILL (الحد الأقصى للملء) أو استخدام خيار التسخين في الغسالة، إن كان متاحًا.

WA186DSHASU-02703E_AR_130131.indd Sec4:32 1/31/2013 6:01:23 PM

جدول الدورات

استخدم هذا الجدول لضبط الدورة والخيارات المثلى حسب طبيعة الغسيل.

WA186DSHASU

(●: إعداد المصنع. ○: قابل للتحديد)

	الوظائف															
	Power Wave (نمط الموجة القوية)			Water Level (مستوى الماء)									Water Supply (تزويد الماء)			
	High (عالي)	Medium (وسط)	Low (منخفض)	١	٢	٣	٤	٥	٦	٧	٨	٩	Hot (ساخن)	Hot/Cold (بارد/ساخن)	Cold (بارد)
Fuzzy (رقمي)	○	●	○	○	○	○	○	○	○	○	○	○	○	○	●
Quick Wash (الغسيل السريع)	○	●	○	○	○	○	○	○	○	○	○	○	○	○	●
Delicate (ملابس رقيقة)	-	-	●	○	○	●	○	○	○	○	○	○	-	●	○
Towels (المناشف)	-	●	-	○	○	○	○	●	○	○	○	○	○	●	○
Silent (نمط التشغيل الهادئ)	-	○	●	○	○	○	○	●	○	○	○	○	○	○	●
Rinse+Spin (شطف+دوران)	-	●	-	○	○	○	○	●	○	○	○	○	○	○	●
Spin (دوران)	-	-	-	-	-	-	-	-	-	-	-	●	-	-	-
Tub Clean (تنظيف الحوض)	-	●	-	-	-	-	-	●	-	-	-	-	-	●	-
60 °C Magic Clean (دورة سحرية ١٠ درجة مئوية)	-	●	-	○	○	●	○	○	-	-	-	-	○	●	○
40 °C Magic Clean (دورة سحرية ٤٠ درجة مئوية)	-	●	-	○	○	●	○	○	-	-	-	-	○	●	○
Baby Care (دورة الإعتناء بالأطفال)	-	-	●	○	○	○	○	○	○	○	○	○	○	○	●
Baby Care (دورة الإعتناء بالأطفال)	●	-	-	○	○	○	○	○	○	●	○	○	○	○	●
Heavy Soil(غسيل مركز)	●	○	○	○	○	○	○	○	○	○	○	○	○	●	○

	الخيارات					
	Wash (غسيل)	Rinse (شطف)	Spin (دوران)	Soak (تنقيع)	Last Setting (الإعداد الأخير)	Delay Start (بدء متأخر)
Fuzzy (رقمي)	○	○	○	○	○	○
Quick Wash (الغسيل السريع)	○	○	○	○	○	○
Delicate (ملابس رقيقة)	-	-	-	-	○	○
Towels (المناشف)	○	○	○	○	○	○
Silent (نمط التشغيل الهادئ)	○	○	○	○	○	○
Rinse+Spin (شطف+دوران)	-	○	○	-	○	○
Spin (دوران)	-	-	○	-	○	○
Tub Clean (تنظيف الحوض)	-	-	-	-	○	○
60 °C Magic Clean (دورة سحرية ١٠ درجة مئوية)	○	○	○	-	○	○
40 °C Magic Clean (دورة سحرية ٤٠ درجة مئوية)	○	○	○	-	○	○
Baby Care (دورة الإعتناء بالأطفال)	○	○	○	●	○	○
Baby Care (دورة الإعتناء بالأطفال)	○	○	○	○	○	○
Heavy Soil(غسيل مركز)	○	○	○	●	○	○

WA186DSHASU-02703E_AR_130131.indd Sec4:33 1/31/2013 6:01:23 PM

الملحق

حماية البيئة

- هذه الغسالة مصنوعة من مواد قابلة لإعادة التصنيع. إذا قررت التخلص منها. فيرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. فك الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الجهة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع والمبيضات قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

تتوافق هذه الغسالة مع معايير السلامة الأوروبية (EC directive 93/68 وEN Standard 60335).

المواصفات

النوع	غسالة ملابس أمامية التحميل	
الأبعاد	القسم	بوصة (مم)
	A. الارتفاع	٤٤,٦" (١١٣٥)
	B. العرض	٢٧" (٦٨٦)
	C. الارتفاع عند فتح الباب	٥٧,٥" (١٤٦٢)
	D. العمق	٢٨,٦" (٧٢٨)

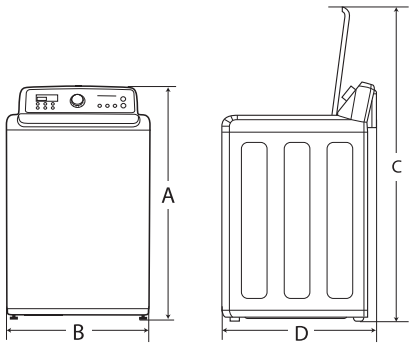

ضغط الماء	٢٠-١١٦ رطل / بوصة مربعة (١٣٧-٨٠٠ كيلوباسكال)		
الوزن	٦٩ كجم (١٥٢,١ رطل)		
كمية الماء	١٢٠ لتر		
استهلاك الطاقة	الغسيل	٢٢٠ فولت	٧٠٠ واط
	الغسل والتسخين	٢٢٠ فولت	١٤٠٠ واط
	الدوران	٢٢٠ فولت	٤٠٠ واط
	التصريف	٢٢٠ فولت	٣٠ واط
الدوران	WA186DSHASU	٧٣٠ دورة في الدقيقة	

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WA186DSHASU-02703E_AR_130131.indd Sec4:34 1/31/2013 6:01:23 PM

مذكرة

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل	أو قم بزيارة موقعنا على الإنترنت
Saudi Arabia	9200-21230	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)

كود رقم. DC68-02703E_AR

WA186DSHASU-02703E_AR_130131.indd Sec4:36 1/31/2013 6:01:23 PM